

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS SPECIFICATIONS	1-27 1-28

2

MAINTENANCE AND TUNE-UP

LUBRICATION	2-5
ENGINE MAINTENANCE	2-9
BOAT MAINTENANCE	2-36
TUNE-UP	2-39
TIMING & SYNCHRONIZATION	2-49
VALVE CLEARANCE (4-STROKE MODELS)	2-72
STORAGE (WHAT TO DO BEFORE AND AFTER)	2-77
CLEARING A SUBMERGED MOTOR	2-81
SPECIFICATIONS	2-82

3

FUEL SYSTEMS

FUEL & COMBUSTION BASICS	3-2
FUEL TANK & LINES	3-6
CARBURETED FUEL SYSTEM	3-11
ELECTRONIC FUEL INJECTION SYSTEMS (EFI/TLDI) SPECIFICATIONS	3-35 3-35

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS (ELECTRONIC)	4-8
CHARGING CIRCUIT	4-30
STARTING CIRCUIT	4-40
WARNING SYSTEM	4-49
WIRING DIAGRAMS	4-55
SPECIFICATIONS	

5

LUBRICATION & COOLING

AUTOMIX OILING SYSTEM (2-STROKE MOTORS)	5-2
LUBRICATION SYSTEM (4-STROKE MOTORS)	5-11
COOLING SYSTEM	5-16
SPECIFICATIONS	5-34

CONTENTS

POWERHEAD 6-2
POWERHEAD – 2-STROKE
POWERHEAD – 4-STROKE
POWERHEAD RECONDITIONING 6-59
POWERHEAD BREAK-IN 6-73
SPECIFICATIONS 6-74

POWERHEAD

6

LOWER UNIT 7-2
GEARCASE

LOWER UNIT

7

MECHANICAL TILT (UNASSISTED OR GAS-ASSIST) 8-2
POWER TILT/TRIM SYSTEMS 8-12

TRIM & TILT SYSTEMS

8

REMOTE CONTROLS 9-2
TILLER HANDLE 9-2
CONTROL CABLES 9-12

REMOTE CONTROLS

9

HAND REWIND STARTER 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-17

MASTER INDEX

<p>AIR COMPRESSOR - TLDI 3-57 DESCRIPTION & OPERATION 3-57 OVERHAUL 3-58 REMOVAL & INSTALLATION 3-57</p> <p>AIR FILTER (TLDI AIR COMPRESSOR) 2-32 INSPECTION & SERVICE 2-32</p> <p>AIR PRESSURE REGULATOR (TLDI ONLY) 3-59 DESCRIPTION & OPERATION 3-59 REMOVAL & INSTALLATION 3-59 TESTING 3-59</p> <p>ANODES 2-29 INSPECTION 2-30 LOCATION & GENERAL INFORMATION 2-29 SERVICING 2-30</p> <p>AUTOMIX BLEEDING, VERIFICATION & TROUBLESHOOTING 5-2 BLEEDING THE OIL SYSTEM 5-2 TESTING THE ELECTRIC PUMP 5-3 VERIFYING THE PUMP IS WORKING 5-2</p> <p>AUTOMIX CHECK VALVE (CARBURETED MOTORS ONLY) 5-3 CHECKING 5-3</p> <p>AUTOMIX OIL PUMP & TANK ASSEMBLY 5-3 REMOVAL & INSTALLATION 5-3</p> <p>AUTOMIX OILING SYSTEM - 2-STROKE MOTORS 5-2 AUTOMIX BLEEDING, VERIFICATION & TROUBLESHOOTING 5-2 AUTOMIX CHECK VALVE (CARBURETED MOTORS ONLY) 5-3 AUTOMIX OIL PUMP & TANK ASSEMBLY 5-3 DESCRIPTION & OPERATION 5-2 OIL PUMP & SYSTEM LINES 5-6 OIL RECIRCULATION & VENT HOSES 5-8</p> <p>BASIC ELECTRICAL THEORY 4-2 HOW DOES ELECTRICITY WORK: THE WATER ANALOGY 4-2 OHM'S LAW 4-2</p> <p>BATTERY</p> <p> CABLES 4-40 CHARGERS 4-39 CONSTRUCTION 4-38 LOCATION 4-39 MAINTENANCE 2-36 MARINE BATTERIES 4-38 RATINGS 4-39 SAFETY PRECAUTIONS 4-39 STORAGE 2-38 TESTING 2-37</p> <p>BEFORE/AFTER EACH USE 2-4 VISUALLY INSPECTING THE BOAT & MOTOR 2-4</p> <p>BOAT MAINTENANCE 2-36 BATTERIES 2-36 FIBERGLASS HULL 2-38</p> <p>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) 1-10 ANCHORS 1-10 BAILING DEVICES 1-10 COMPASS 1-10 INSTALLATION 1-10 PRECAUTIONS 1-11 SELECTION 1-10 FIRST AID KIT 1-10 OAR/PADDLE (SECOND MEANS OF PROPULSION) 1-10 TOOLS & SPARE PARTS 1-12 VHF-FM RADIO 1-10</p> <p>BOATING SAFETY 1-4 COURTESY MARINE EXAMINATIONS 1-10 REGULATIONS FOR YOUR BOAT 1-4 CAPACITY INFORMATION 1-4 CERTIFICATE OF COMPLIANCE 1-4 DOCUMENTING OF VESSELS 1-4 HULL IDENTIFICATION NUMBER 1-4 LENGTH OF BOATS 1-4 NUMBERING OF VESSELS 1-4 REGISTRATION OF BOATS 1-4 SALES & TRANSFERS 1-4 VENTILATION 1-4 VENTILATION SYSTEMS</p>	<p>REQUIRED SAFETY EQUIPMENT 1-5 FIRE EXTINGUISHERS 1-5 PERSONAL FLOTATION DEVICES 1-7 SOUND PRODUCING DEVICES 1-8 TYPES OF FIRES 1-5 VISUAL DISTRESS SIGNALS 1-8 WARNING SYSTEM 1-7</p> <p>BREAKING IN A POWERHEAD 6-73 CARBURETED 2-STROKE MOTORS 6-73 TLDI 2-STROKE MOTORS 6-74 4-STROKE MOTORS 6-74</p> <p>CARBURETED FUEL SYSTEM 3-11 CARBURETOR - 2.5/3.5 HP (2-STROKE) 3-15 CARBURETOR - 2-6 HP (4-STROKE) 3-17 CARBURETOR - 5-40 HP (2-STROKE, 1 & 2-CYL) 3-20 CARBURETOR - 8-30 HP (4-STROKE) 3-22 CARBURETOR - 60/70 HP (2-STROKE, 2-CYL) & 40-140 HP (2-STROKE, 3- OR 4-CYL) 3-25 CARBURETOR SERVICE TIPS 3-14 CLEANING & INSPECTION 3-28 DESCRIPTION & OPERATION 3-12 ELECTRIC CHOKE SOLENOID 3-32 ELECTRIC FUEL PRIMER 3-33 FUEL PUMP 3-29 IDLE MIXTURE ADJUSTMENTS 3-15 TROUBLESHOOTING 3-13</p> <p>CARBURETOR</p> <p> 2.5/3.5 HP (2-STROKE) 3-15 2-6 HP (4-STROKE) 3-17 5-40 HP (2-STROKE, 1 & 2-CYL) 3-20 8-30 HP (4-STROKE) 3-22 60/70 HP (2-STROKE, 2-CYL) & 40-140 HP (2-STROKE, 3- OR 4-CYL) 3-25 CLEANING & INSPECTION 3-28 SERVICE TIPS 3-14</p> <p>CD UNIT (IGNITION MODULE) - CARBURETED ENGINES ONLY 4-19 REMOVAL & INSTALLATION 4-24 TESTING 4-19</p> <p>CHARGING CIRCUIT 4-30 BATTERY 4-38 GENERAL INFORMATION 4-30 RECTIFIER OR REGULATOR/RECTIFIER 4-35 STATOR/BATTERY CHARGE COIL 4-33 TROUBLESHOOTING 4-31</p> <p>CLEARING A SUBMERGED MOTOR 2-81</p> <p>COMPRESSION TESTS 2-41 OVERHAUL LEAKAGE CHECK 2-42 TUNE-UP COMPRESSION CHECK 2-41</p> <p>CONNECTING RODS 6-63 INSPECTION 6-63</p> <p>CONTROL CABLES 9-12 RIGGING 9-12</p> <p>COOLING SYSTEM</p> <p> COOLING SYSTEM SCHEMATICS 5-18 DESCRIPTION & OPERATION 5-17 FLUSHING THE SYSTEM 2-10 SCHEMATICS 5-18 THERMOSTAT 5-26 TROUBLESHOOTING 5-23 WATER PUMP 5-28</p> <p>COOLING SYSTEM SCHEMATICS 5-18</p> <p>CRANKSHAFT 6-61 INSPECTION 6-61 MEASURING BEARING CLEARANCE USING PLASTIGAGE® 6-62</p> <p>CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL 3-68 REMOVAL & INSTALLATION 3-69 TESTING 3-68</p>
--	---

10-18 MASTER INDEX

CYLINDER BLOCK	6-66	SELF DIAGNOSTIC SYSTEM	3-39
BLOCK & CYLINDER HEAD WARPAGE	6-68	SENSOR & CIRCUIT RESISTANCE TESTS	3-45
HONING CYLINDER WALLS	6-67	TEMPERATURE SENSORS	3-69
INSPECTION	6-67	THROTTLE BODY & INTAKE ASSEMBLY	3-45
CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN)	6-69	THROTTLE POSITION SENSOR (TPS)	3-67
CHECKING FOR VALVE LEAKAGE	6-69	TROUBLESHOOTING CHARTS	3-41
CHECKING THE CAMSHAFT	6-69	TROUBLESHOOTING ELECTRONIC FUEL INJECTION	3-38
CHECKING THE ROCKER ARMS & SHAFTS	6-71	TWO-STROKE LOW-PRESSURE DIRECT INJECTION (TLDI)	3-37
CHECKING THE VALVE ASSEMBLIES	6-71	VAPOR SEPARATOR TANK (VST) ASSEMBLY	3-49
DE-CARBONING THE PISTONS	2-40	ELECTRONIC SAFETY GOVERNOR (60/70 HP 2-CYL ONLY)	4-30
DESCRIPTION & OPERATION		TESTING & SERVICE	4-30
AIR COMPRESSOR - TLDI	3-57	EMERGENCY STOP SWITCH	9-8
AIR PRESSURE REGULATOR (TLDI ONLY)	3-59	ENGINE CONTROL UNIT (ECU)	3-66
AUTOMIX SYSTEM	5-2	REMOVAL & INSTALLATION	3-66
CARBURETOR	3-12	ENGINE COVER LATCHES	2-5
COOLING SYSTEM	5-17	LUBRICATION	2-6
FUEL/AIR RAIL & INJECTORS (TLDI)	3-60	RECOMMENDED LUBRICANT	2-5
GAS ASSIST TILT SYSTEMS	8-3	ENGINE COVERS	2-9
HAND REWIND STARTER	10-2	REMOVAL & INSTALLATION	2-9
IGNITION COILS	4-25	ENGINE IDENTIFICATION	2-2
IGNITION SYSTEMS	4-9	ENGINE MODEL CODE & SERIAL NUMBER	2-3
LUBRICATION SYSTEM	5-11	ENGINE MAINTENANCE	2-9
MANUAL TILT SYSTEMS	8-2	AIR FILTER (TLDI AIR COMPRESSOR)	2-32
POWER TRIM/TILT SYSTEMS	8-12	ANODES (ZINCS)	2-29
REMOTE CONTROLS	9-7	COOLING SYSTEM	2-10
STARTING CIRCUIT	4-40	DRIVE BELT (TLDI COMPRESSOR)	2-30
TILLER HANDLE	9-2	ENGINE COVERS	2-9
WARNING SYSTEM	4-49	ENGINE OIL (2-STROKE)	2-13
DRIVE BELT (TLDI COMPRESSOR)	2-30	ENGINE OIL & FILTER (4-STROKE)	2-15
INSPECTION	2-31	FUEL FILTER	2-20
REMOVAL & INSTALLATION	2-31	GEARCASE (LOWER UNIT) OIL	2-18
ELECTRIC CHOKE SOLENOID	3-32	OIL FILTER (2-STROKE TLDI OR AUTOMIX MODELS)	2-32
REMOVAL & INSTALLATION	3-33	PROPELLER	2-23
TESTING	3-32	TIMING BELT	2-33
ELECTRIC FUEL PRIMER	3-33	ENGINE MOUNT CLAMP SCREWS	2-6
REMOVAL & INSTALLATION	3-33	LUBRICATION	2-6
TESTING	3-33	RECOMMENDED LUBRICANT	2-6
ELECTRIC STARTER MOTOR PINION	2-5	ENGINE OIL (2-STROKE)	2-13
LUBRICATION	2-5	FILLING	2-13
RECOMMENDED LUBRICANT	2-5	FUEL:OIL RATIO	2-13
ELECTRICAL COMPONENTS	4-2	OIL RECOMMENDATIONS	2-13
GROUND	4-3	ENGINE OIL & FILTER (4-STROKE)	2-15
LOAD	4-4	CHECKING OIL LEVEL	2-15
POWER SOURCE	4-2	OIL CHANGE & FILTER SERVICE	2-16
PROTECTIVE DEVICES	4-3	OIL RECOMMENDATIONS	2-15
SWITCHES & RELAYS	4-4	ENGINE TEMPERATURE SENSORS (EFI/TLDI)	4-51
WIRING & HARNESSSES	4-4	ENGINE TEMPERATURE SWITCHES (CARBURETED)	4-51
ELECTRICAL SYSTEM PRECAUTIONS	4-8	REMOVAL & INSTALLATION	4-52
ELECTRICAL TESTING	4-7	TESTING	4-51
OPEN CIRCUITS	4-7	EXCITER/CHARGE COIL	4-13
RESISTANCE	4-7	REMOVAL & INSTALLATION	4-14
SHORT CIRCUITS	4-8	TESTING	4-13
VOLTAGE	4-7	EXHAUST COVER	6-60
VOLTAGE DROP	4-7	INSPECTION	6-60
ELECTRONIC FUEL INJECTION SYSTEMS (EFI/TLDI)	3-35	EXHAUST GASES	7-2
AIR COMPRESSOR - TLDI	3-57	FASTENERS, MEASUREMENTS & CONVERSIONS	1-27
AIR PRESSURE REGULATOR (TLDI ONLY)	3-59	BOLTS, NUTS & OTHER THREADED RETAINERS	1-27
CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL	3-68	STANDARD & METRIC MEASUREMENTS	1-27
ENGINE CONTROL UNIT (ECU)	3-66	TORQUE	1-27
FUEL INJECTION BASICS	3-36	FIBERGLASS HULL	2-38
FUEL PRESSURE REGULATOR	3-59	INSPECTION & CARE	2-38
FUEL RAIL & INJECTORS (EFI)	3-65	FLYWHEEL	6-3
FUEL/AIR RAIL & INJECTORS (TLDI)	3-60	REMOVAL & INSTALLATION	6-3
HIGH-PRESSURE FUEL FEED PUMP (FFP)	3-52	FUEL	3-2
IDLE SPEED CONTROL (ISC) VALVE (EFI ONLY)	3-73	ALCOHOL-BLENDED FUELS	4-3
LOW-PRESSURE FUEL PUMP	3-54	CHECKING FOR STALE/CONTAMINATED FUEL	3-4
MAIN RELAY (115 HP TLDI MODELS)	3-72	HIGH ALTITUDE OPERATION	4-3
MANIFOLD AIR PRESSURE (MAP) SENSOR	3-71	OCTANE RATING	3-2
NISSAN/TOHATSU 4-STROKE EFI	3-37	RECOMMENDATIONS	4-3
		VAPOR PRESSURE	4-3

<p>FUEL FILTER 2-20</p> <p>FUEL FILTER SERVICE 2-20</p> <p style="padding-left: 20px;">LOW PRESSURE FILTERS 2-20</p> <p style="padding-left: 20px;">HIGH PRESSURE EFI/TLDI FILTERS 2-22</p> <p>FUEL INJECTION BASICS 3-36</p> <p>FUEL LINES & FITTINGS 3-8</p> <p style="padding-left: 20px;">SERVICE 3-10</p> <p style="padding-left: 20px;">TESTING 3-8</p> <p>FUEL PRESSURE REGULATOR 3-59</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-60</p> <p style="padding-left: 20px;">TESTING 3-60</p> <p>FUEL PUMP 3-29</p> <p style="padding-left: 20px;">LOW-PRESSURE 3-54</p> <p style="padding-left: 20px;">HIGH-PRESSURE 3-52</p> <p style="padding-left: 20px;">OVERHAUL 3-56</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-55</p> <p style="padding-left: 20px;">TESTING 3-54</p> <p style="padding-left: 20px;">OVERHAUL 3-32</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-31</p> <p style="padding-left: 20px;">TESTING 3-30</p> <p>FUEL RAIL & INJECTORS (EFI) 3-65</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-66</p> <p style="padding-left: 20px;">TESTING 3-65</p> <p>FUEL SYSTEM BASICS 3-2</p> <p style="padding-left: 20px;">FUEL 3-2</p> <p style="padding-left: 20px;">FUEL SYSTEM PRESSURIZATION 3-4</p> <p style="padding-left: 20px;">FUEL SYSTEM SERVICE CAUTIONS 3-2</p> <p>FUEL SYSTEM PRESSURIZATION 3-4</p> <p style="padding-left: 20px;">PRESSURIZING THE FUEL SYSTEM (CHECKING FOR LEAKS) 3-5</p> <p style="padding-left: 20px;">RELIEVING FUEL SYSTEM PRESSURE (EFI/TLDI MOTORS ONLY) 3-5</p> <p>FUEL SYSTEM SERVICE CAUTIONS 3-2</p> <p>FUEL TANK 3-6</p> <p style="padding-left: 20px;">SERVICE 3-7</p> <p>FUEL TANK & LINES 3-6</p> <p style="padding-left: 20px;">FUEL LINES & FITTINGS 3-8</p> <p style="padding-left: 20px;">FUEL TANK 3-6</p> <p>FUEL/AIR RAIL & INJECTORS (TLDI) 3-60</p> <p style="padding-left: 20px;">DESCRIPTION & OPERATION 3-60</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-62</p> <p style="padding-left: 20px;">TESTING DIRECT (AIR) INJECTORS RESISTANCE 3-61</p> <p style="padding-left: 20px;">TESTING THE FUEL INJECTORS 3-62</p> <p>GEARCASE - ALL</p> <p style="padding-left: 20px;">2.5/3.5 HP, 2-STROKE (NON-SHIFTING) 7-4</p> <p style="padding-left: 20px;">2-3.5 HP, 2 & 4-STROKE (SHIFTING) 7-8</p> <p style="padding-left: 20px;">5-70 HP (2-STROKE, 1 & 2-CYL) 7-15</p> <p style="padding-left: 20px;">4-8 HP (4-STROKE) 7-27</p> <p style="padding-left: 20px;">9.9-20 HP (4-STROKE) 7-36</p> <p style="padding-left: 20px;">25/30 HP (CARB & EFI, 4-STROKE) 7-50</p> <p style="padding-left: 20px;">40-140 HP 2-STROKE (3 & 4-CYL) 7-60</p> <p>GEARCASE - 2-STROKE</p> <p style="padding-left: 20px;">2.5/3.5 HP (NON-SHIFTING) 7-4</p> <p style="padding-left: 40px;">ASSEMBLY 7-7</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-6</p> <p style="padding-left: 40px;">DISASSEMBLY 7-5</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-4</p> <p style="padding-left: 40px;">SHIMMING 7-7</p> <p style="padding-left: 20px;">2-3.5 HP (SHIFTING) 7-8</p> <p style="padding-left: 40px;">ASSEMBLY 7-11</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-10</p> <p style="padding-left: 40px;">DISASSEMBLY 7-9</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-8</p> <p style="padding-left: 40px;">SHIMMING 7-14</p> <p style="padding-left: 20px;">5-70 HP (1 & 2-CYL) 7-15</p> <p style="padding-left: 40px;">ASSEMBLY 7-19</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-19</p> <p style="padding-left: 40px;">DISASSEMBLY 7-16</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-15</p> <p style="padding-left: 40px;">SHIMMING 7-23</p>	<p>40-140 HP (3 & 4-CYL) 7-60</p> <p style="padding-left: 20px;">ASSEMBLY 7-70</p> <p style="padding-left: 20px;">CLEANING & INSPECTION 7-65</p> <p style="padding-left: 20px;">DISASSEMBLY 7-61</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 7-60</p> <p style="padding-left: 20px;">SHIMMING 7-73</p> <p>GEARCASE - 4-STROKE</p> <p style="padding-left: 20px;">2-3.5 HP (SHIFTING) 7-8</p> <p style="padding-left: 40px;">ASSEMBLY 7-11</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-10</p> <p style="padding-left: 40px;">DISASSEMBLY 7-9</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-8</p> <p style="padding-left: 40px;">SHIMMING 7-14</p> <p style="padding-left: 20px;">4-8 HP 7-27</p> <p style="padding-left: 40px;">ASSEMBLY 7-31</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-31</p> <p style="padding-left: 40px;">DISASSEMBLY 7-28</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-27</p> <p style="padding-left: 40px;">SHIMMING 7-35</p> <p style="padding-left: 20px;">9.9-20 HP 7-36</p> <p style="padding-left: 40px;">ASSEMBLY 7-45</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-41</p> <p style="padding-left: 40px;">DISASSEMBLY 7-37</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-36</p> <p style="padding-left: 40px;">SHIMMING 7-48</p> <p style="padding-left: 20px;">25/30 HP (CARB & EFI) 7-50</p> <p style="padding-left: 40px;">ASSEMBLY 7-56</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-53</p> <p style="padding-left: 40px;">DISASSEMBLY 7-51</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-50</p> <p style="padding-left: 40px;">SHIMMING 7-58</p> <p>GEARCASE OIL 2-18</p> <p style="padding-left: 20px;">CHECKING LEVEL & CONDITION 2-18</p> <p style="padding-left: 20px;">DRAINING & FILLING 2-19</p> <p style="padding-left: 20px;">OIL RECOMMENDATIONS 2-18</p> <p>GENERAL INFORMATION 2-2</p> <p style="padding-left: 20px;">BEFORE/AFTER EACH USE 2-4</p> <p style="padding-left: 20px;">ENGINE IDENTIFICATION 2-2</p> <p style="padding-left: 20px;">LOWER UNIT 7-2</p> <p style="padding-left: 20px;">MAINTENANCE COVERAGE 2-2</p> <p style="padding-left: 20px;">MAINTENANCE EQUALS SAFETY 2-2</p> <p style="padding-left: 20px;">OUTBOARDS ON SAIL BOATS 2-2</p> <p>HAND REWIND STARTER 10-2</p> <p style="padding-left: 20px;">DESCRIPTION & OPERATION 10-2</p> <p style="padding-left: 20px;">TROUBLESHOOTING 10-2</p> <p style="padding-left: 20px;">2.5/3.5 HP (2-STROKE) MOTORS 10-3</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-4</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-3</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-3</p> <p style="padding-left: 20px;">2/2.5/3.5 HP (4-STROKE) MOTORS 10-5</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-6</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-5</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-5</p> <p style="padding-left: 20px;">4/5/6 HP & 8/9.8 HP (4-STROKE) MOTORS 10-7</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-9</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-7</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-7</p> <p style="padding-left: 20px;">5-40 HP (2-STROKE, 2-CYL) MOTORS 10-9</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-12</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-10</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-9</p> <p style="padding-left: 20px;">9.9-30 HP (4-STROKE) MOTORS 10-13</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-13</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-13</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-13</p> <p style="padding-left: 20px;">40-70 HP (2-STROKE, 3-CYL) MOTORS 10-14</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-15</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-15</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-14</p>
---	---

10-20 MASTER INDEX

HIGH-PRESSURE FUEL FEED PUMP (FFP)	3-52
FUEL PRESSURE & PUMP TESTING	3-52
REMOVAL & INSTALLATION	3-53
HOW TO USE THIS SERVICE	1-2
AVOIDING THE MOST COMMON MISTAKES	1-3
AVOIDING TROUBLE	1-2
CAN YOU DO IT?	1-2
DIRECTIONS & LOCATIONS	1-2
MAINTENANCE OR REPAIR?	1-2
PROFESSIONAL HELP	1-3
PURCHASING PARTS	1-3
WHERE TO BEGIN	1-2
IDLE MIXTURE ADJUSTMENTS	3-15
IDLE SPEED CONTROL (ISC) VALVE (EFI ONLY)	3-73
TESTING & REPLACEMENT	3-73
IGNITION COILS	4-25
DESCRIPTION & OPERATION	4-25
REMOVAL & INSTALLATION	4-28
TESTING	4-25
IGNITION SYSTEMS	2-48
INSPECTION	2-48
IGNITION SYSTEMS (ELECTRONIC)	4-8
CD UNIT - CARBURETED ENGINES ONLY	4-19
DESCRIPTION & OPERATION	4-9
ELECTRONIC SAFETY GOVERNOR (60/70 HP 2-CYL ONLY)	4-30
EXCITER/CHARGE COIL	4-13
IGNITION COILS	4-25
KNOCK SENSOR & CONTROLLER (140 HP ONLY)	4-29
PULSER/TRIGGER COIL (CARBURETED MODELS ONLY)	4-15
STOP SWITCH CIRCUIT	4-12
TROUBLESHOOTING	4-10
UNDER-FLYWHEEL IGNITION & CHARGE COIL EXPLODED VIEWS	4-16
IMPORTANT POINTS FOR POWERHEAD OVERHAUL	6-2
CLEANLINESS	6-3
POWERHEAD COMPONENTS	6-3
REPAIR PROCEDURES	6-2
TORQUE SEQUENCE & VALUES	6-2
KNOCK SENSOR & CONTROLLER (140 HP ONLY)	4-29
TESTING & SERVICE	4-29
LEVER (CONTROL HANDLE)	9-7
LINKAGE, CABLES & SHAFTS	2-7
LUBRICATION	2-7
RECOMMENDED LUBRICANT	2-7
LOW-PRESSURE FUEL PUMP	3-54
OVERHAUL	3-56
REMOVAL & INSTALLATION	3-55
TESTING	3-54
LOWER UNIT	7-2
EXHAUST GASES	7-2
GENERAL INFORMATION	7-2
REPAIR & OVERHAUL TIPS	7-3
SHIFTING PRINCIPLES	7-2
TROUBLESHOOTING	7-2
2.5/3.5 HP, 2-STROKE (NON-SHIFTING)	7-4
2-3.5 HP, 2 & 4-STROKE (SHIFTING)	7-8
5-70 HP (2-STROKE, 1 & 2-CYL)	7-15
4-8 HP (4-STROKE)	7-27
9.9-20 HP (4-STROKE)	7-36
25/30 HP (CARB & EFI, 4-STROKE)	7-50
40-140 HP 2-STROKE (3 & 4-CYL)	7-60
LOWER UNIT OIL	2-18
CHECKING LEVEL & CONDITION	2-18
DRAINING & FILLING	2-19
OIL RECOMMENDATIONS	2-18

LUBRICATION SERVICE	2-5
ELECTRIC STARTER MOTOR PINION	2-5
ENGINE COVER LATCHES	2-5
ENGINE MOUNT CLAMP SCREWS	2-6
LINKAGE, CABLES & SHAFTS	2-7
POWER TRIM/TILT RESERVOIR	2-6
STEERING SHAFT	2-8
TILT & SWIVEL BRACKET	2-8
LUBRICATION SYSTEM (4-STROKE MOTORS)	5-11
DESCRIPTION & OPERATION	5-11
OIL PRESSURE	5-12
OIL PRESSURE SWITCH & WARNING SYSTEM	5-16
OIL PUMP	5-13
MAIN RELAY (115 HP TLDI MODELS)	3-72
TESTING & REPLACEMENT	3-72
MAINTENANCE COVERAGE	2-2
OWNER'S MANUALS	2-2
MAINTENANCE EQUALS SAFETY	2-2
MANIFOLD AIR PRESSURE (MAP) SENSOR	3-71
REMOVAL & INSTALLATION	3-72
TESTING	3-72
MECHANICAL TILT (UNASSISTED OR GAS-ASSIST)	8-2
DESCRIPTION & OPERATION	8-2
INTRODUCTION	8-2
SERVICING	8-3
NEUTRAL LOCK-OUT ASSEMBLY	9-7
NEUTRAL START SWITCH	9-8
NISSAN/TOHATSU 4-STROKE EFI	3-37
OIL FILTER (2-STROKE TLDI OR AUTOMIX MODELS)	2-32
REMOVAL & INSTALLATION	2-32
OIL LEVEL SWITCH (OIL INJECTED 2-STROKES)	4-53
TESTING & SERVICE	4-53
OIL PRESSURE - 4-STROKE	5-12
TESTING	5-12
OIL PRESSURE SWITCH (4-STROKE ONLY)	4-52
REMOVAL & INSTALLATION	4-53
TESTING	4-52
OIL PRESSURE SWITCH & WARNING SYSTEM - 4-STROKE	5-16
OIL PUMP - 4-STROKE	5-13
REMOVAL, OVERHAUL & INSTALLATION	5-13
2/2.5/3.5 HP MOTORS	5-13
4-30 HP MOTORS	5-14
OIL PUMP & SYSTEM LINES - AUOTMIX	5-6
OIL RECIRCULATION & VENT HOSES - AUTOMIX	5-8
OUTBOARDS ON SAIL BOATS	2-2
PISTONS	6-64
INSPECTION	6-64
OVERSIZE PISTONS & RINGS	6-66
PISTON RING SIDE/GROOVE CLEARANCE	6-65
RING END-GAP CLEARANCE	6-65
POWER TRIM/TILT RESERVOIR	2-6
CHECKING FLUID LEVEL/CONDITION	2-7
RECOMMENDED LUBRICANT	2-6
POWER TRIM/TILT (PTT) SWITCH	9-8
POWER TRIM/TILT SYSTEMS	8-12
DESCRIPTION & OPERATION	8-12
INTRODUCTION	8-12
PTT ASSEMBLY	8-16
PTT SOLENOIDS	8-27
PTT SWITCH	8-28
TILT ROD	8-22
TRIM ROD & CAP (3-RAM SYSTEMS ONLY)	8-18
TROUBLESHOOTING	8-12
TRIM MOTOR & PUMP	8-25
TRIM SENDER & GAUGE	8-28

POWERHEAD	6-2	RE-COMMISSIONING	2-80
FLYWHEEL	6-3	REMOVAL FROM STORAGE	2-80
GENERAL INFORMATION	6-2	RECTIFIER OR REGULATOR/RECTIFIER	4-35
IMPORTANT POINTS FOR POWERHEAD OVERHAUL	6-2	REMOVAL & INSTALLATION	4-35
POWERHEAD - 2-STROKE		TESTING	4-35
2.5-40 HP (1 & 2-CYL)	6-5	REMOTE CONTROLS	9-2
CLEANING & INSPECTION	6-9	DESCRIPTION & OPERATION	9-7
DISSASSEMBLY & ASSEMBLY	6-6	EMERGENCY STOP SWITCH	9-8
REMOVAL & INSTALLATION	6-5	EXPLODED VIEWS & WIRING	9-8
60/70 HP (2-CYL)	6-33	INTRODUCTION	9-2
CLEANING & INSPECTION	6-37	LEVER (CONTROL HANDLE)	9-7
DISSASSEMBLY & ASSEMBLY	6-34	NEUTRAL LOCK-OUT ASSEMBLY	9-7
REMOVAL & INSTALLATION	6-33	NEUTRAL START SWITCH	9-8
40-140 HP (3 & 4-CYL)	6-45	POWER TRIM/TILT (PTT) SWITCH	9-8
CLEANING & INSPECTION	6-58	TROUBLESHOOTING	9-8
DISSASSEMBLY & ASSEMBLY	6-54	WARNING BUZZER/HORN	9-8
REMOVAL & INSTALLATION	6-45	RIGGING	9-12
POWERHEAD - 4-STROKE		SAFETY IN SERVICE	1-12
2/2.5/3.5 HP	6-10	DO'S	1-12
CLEANING & INSPECTION	6-15	DON'TS	1-13
DISASSEMBLY & ASSEMBLY	6-11	SELF DIAGNOSTIC SYSTEM	3-39
REMOVAL & INSTALLATION	6-10	READING CODES	3-39
4/5/6 HP	6-15	EFI MOTORS	3-39
CLEANING & INSPECTION	6-22	TLDI MOTORS	3-39
CYLINDER BLOCK OVERHAUL	6-18	TROUBLE CODE CHART	3-40
CYLINDER HEAD REMOVAL & INSTALLATION	6-16	SENSOR & CIRCUIT RESISTANCE TESTS	3-45
CYLINDER HEAD OVERHAUL	6-17	TESTING ELECTRONIC COMPONENTS	3-45
POWERHEAD REMOVAL & INSTALLATION	6-15	SHIFTING PRINCIPLES	7-2
8-20 HP	6-22	NON-REVERSE TYPE	7-2
CLEANING & INSPECTION	6-33	REVERSE TYPE	7-2
CYLINDER BLOCK OVERHAUL	6-29	SHOP EQUIPMENT	1-17
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-25	CHEMICALS	1-17
POWERHEAD REMOVAL & INSTALLATION	6-22	CLEANERS	1-18
STRIPPING THE POWERHEAD FOR DISASSEMBLY	6-23	LUBRICANTS & PENETRANTS	1-17
25/30 HP (CARB & EFI)	6-37	SEALANTS	1-18
CLEANING & INSPECTION	6-45	SAFETY TOOLS	1-17
CYLINDER BLOCK OVERHAUL	6-42	EYE & EAR PROTECTION	1-17
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-40	WORK CLOTHES	1-17
POWERHEAD REMOVAL & INSTALLATION	6-37	WORK GLOVES	1-17
STRIPPING THE POWERHEAD FOR DISASSEMBLY	6-39	SPARK PLUG WIRES	2-48
POWERHEAD BREAK-IN	6-73	REMOVAL & INSTALLATION	2-48
BREAKING IN A POWERHEAD	6-73	TESTING	2-48
POWERHEAD REFINISHING	6-59	SPARK PLUGS	2-43
CLEANING	6-59	HEAT RANGE	2-44
CONNECTING RODS	6-63	INSPECTION & GAPPING	2-46
CRANKSHAFT	6-61	READING SPARK PLUGS	2-46
CYLINDER BLOCK	6-66	REMOVAL & INSTALLATION	2-44
CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN)	6-69	SPECIFICATIONS	
EXHAUST COVER	6-60	BOLT TORQUE - TYPICAL METRIC BOLT TORQUE VALUES	1-29
GENERAL INFORMATION	6-59	BOLT TORQUE - TYPICAL U.S. STANDARD BOLT TORQUE VALUES	1-30
PISTONS	6-64	CAPACITIES	2-89
PROPELLER	2-23	CARBURETOR SET-UP	3-34
GENERAL INFORMATION	2-23	CHARGING SYSTEM TESTING	4-100
INSPECTION	2-26	CONVERSION FACTORS	1-28
REMOVAL & INSTALLATION	2-26	COOLING SYSTEM	5-34
2-3.5 HP MOTORS	2-26	ENGINE - 2-STROKE MOTORS	6-74
5 HP & LARGER MODELS	2-27	ENGINE - 4-STROKE MOTORS	6-80
PTT ASSEMBLY	8-16	FUEL INJECTION SENSOR SPECIFICATIONS	
EXPLODED VIEWS	8-18	EFI MODELS	3-74
REMOVAL & INSTALLATION	8-16	TLDI MODELS	3-74
SYSTEM BLEEDING	8-17	GENERAL ENGINE	2-82
PTT SOLENOIDS	8-27	GENERAL ENGINE SYSTEM	2-83
TESTING	8-27	IGNITION TESTING	4-98
PTT SWITCH	8-28	LUBRICATION SERVICES	2-88
TESTING	8-28	MAINTENANCE INTERVALS	2-84
PULSER/TRIGGER COIL (CARBURETED MODELS ONLY)	4-15	SPARK PLUG DIAGNOSIS	2-94
REMOVAL & INSTALLATION	4-16	TUNE-UP SPECIFICATIONS	2-91
TESTING	4-15	TWO-STROKE MOTOR FUEL:OIL RATIO	2-88
		VALVE CLEARANCE	2-93

10-22 MASTER INDEX

STARTER MOTOR.....	4-44	4/5/6 HP (4-STROKE).....	2-54
CLEANING & INSPECTION.....	4-47	GEAR SHIFT INSPECTION.....	2-55
DISASSEMBLY & ASSEMBLY.....	4-45	IDLE SPEED.....	2-54
GENERAL INFORMATION.....	4-44	IGNITION TIMING.....	2-54
REMOVAL & INSTALLATION.....	4-44	THROTTLE CABLE.....	2-55
TESTING.....	4-44	8/9.8 HP (2-STROKE).....	2-55
STARTER MOTOR SOLENOID.....	4-49	IDLE SPEED.....	2-56
SERVICE.....	4-49	IGNITION TIMING.....	2-55
STARTING CIRCUIT.....	4-40	THROTTLE CABLE ADJUSTMENT.....	2-55
DESCRIPTION & OPERATION.....	4-40	8/9.8 HP (4-STROKE).....	2-56
STARTER MOTOR.....	4-44	IDLE SPEED.....	2-56
STARTER MOTOR SOLENOID.....	4-49	IGNITION TIMING.....	2-56
TROUBLESHOOTING.....	4-40	THROTTLE CABLE ADJUSTMENT.....	2-57
STATOR/BATTERY CHARGE COIL.....	4-33	9.9/15/18, 25/30 HP & 40 HP (2-STROKE, 2-CYL).....	2-57
REMOVAL & INSTALLATION.....	4-35	IDLE SPEED.....	2-58
TESTING.....	4-33	IGNITION TIMING.....	2-57
STEERING SHAFT.....	2-8	9.9/15/18 HP (4-STROKE).....	2-58
LUBRICATION.....	2-8	GEAR SHIFT & REVERSE LOCK INSPECTION.....	2-59
RECOMMENDED LUBRICANT.....	2-8	IDLE SPEED.....	2-58
STOP SWITCH CIRCUIT.....	4-12	IGNITION TIMING.....	2-58
STORAGE (WHAT TO DO BEFORE AND AFTER).....	2-77	9.9/15/20 HP (4-STROKE).....	2-59
RE-COMMISSIONING.....	2-80	GEAR SHIFT INSPECTION (REMOTE CONTROL).....	2-60
WINTERIZATION.....	2-77	IDLE SPEED.....	2-61
TEMPERATURE SENSORS.....	3-69	IGNITION TIMING.....	2-61
REMOVAL & INSTALLATION.....	3-71	THROTTLE CABLE/LINK.....	2-59
TESTING.....	3-70	60/70 HP (2-STROKE, 2-CYL).....	2-62
TEST EQUIPMENT.....	4-5	CARBURETOR LINKAGE.....	2-62
JUMPER WIRES.....	4-5	IDLE SPEED.....	2-63
MULTI-METERS.....	4-6	IGNITION TIMING.....	2-63
TEST LIGHTS.....	4-5	REMOTE CABLES.....	2-62
THERMOSTAT.....	5-26	25/30 HP (492CC, 4-STROKE).....	2-63
REMOVAL & INSTALLATION.....	5-26	CARBURETOR BALANCING.....	2-64
THROTTLE BODY & INTAKE ASSEMBLY.....	3-45	IDLE SPEED.....	2-64
REMOVAL & INSTALLATION.....	3-46	IGNITION TIMING.....	2-65
EFI MOTORS.....	3-46	THROTTLE CABLES/LINK.....	2-64
TLDI MOTORS.....	3-47	25/30 HP (526CC, 4-STROKE).....	2-65
THROTTLE POSITION SENSOR (TPS).....	3-67	GEAR SHIFT INSPECTION (REMOTE CONTROL).....	2-66
REMOVAL & INSTALLATION.....	3-67	IDLE SPEED.....	2-66
RESETTING THE TPS ON TLDI MOTORS.....	3-68	IGNITION TIMING.....	2-67
TESTING.....	3-67	THROTTLE CABLE/LINK.....	2-65
TILLER HANDLE.....	9-2	40-140 HP (CARB, 2-STROKE).....	2-67
DESCRIPTION & OPERATION.....	9-2	CARBURETOR SYNCHRONIZATION & ADJUSTMENT.....	2-69
TROUBLESHOOTING.....	9-2	IGNITION TIMING.....	2-67
EXPLODED VIEWS.....	9-2	OIL PUMP APERTURE ADJUSTMENT.....	2-70
TILT ROD.....	8-22	40/50 HP & 70/90 HP (2-STROKE, TLDI 3-CYL).....	2-70
REMOVAL & INSTALLATION.....	8-23	IDLE SPEED INSPECTION.....	2-71
25/30 HP 4-STROKE MODELS.....	8-23	REMOTE CABLE INSTALLATION/ADJUSTMENT.....	2-70
40B/50B TLDI MODELS.....	8-24	115 HP (2-STROKE TLDI).....	2-71
EARLY 60-140 HP CARB MODELS.....	8-24	IDLE SPEED INSPECTION.....	2-72
ALL EXCEPT LISTED.....	8-25	REMOTE CABLE ADJUSTMENT.....	2-71
TILT & SWIVEL BRACKET.....	2-8	TOOLS.....	1-19
LUBRICATION.....	2-8	ELECTRONIC TOOLS.....	1-23
RECOMMENDED LUBRICANT.....	2-8	BATTERY CHARGERS.....	1-23
TIMING BELT.....	2-33	BATTERY TESTERS.....	1-23
INSPECTOR.....	2-33	GAUGES.....	1-25
REMOVAL & INSTALLATION.....	2-33	MULTI-METERS (DVOMS).....	1-24
TIMING & SYNCHRONIZATION.....	2-49	HAND TOOLS.....	1-19
2.5/3.5 HP (2-STROKE).....	2-50	BREAKER BARS.....	1-20
IDLE SPEED.....	2-50	HAMMERS.....	1-22
IGNITION TIMING.....	2-50	PLIERS.....	1-22
MAIN JET NEEDLE.....	2-50	SCREWDRIVERS.....	1-22
2/2.5/3.5 HP (4-STROKE).....	2-51	SOCKET SETS.....	1-19
GEAR SHIFT INSPECTION.....	2-53	TORQUE WRENCHES.....	1-19
IDLE SPEED.....	2-51	WRENCHES.....	1-20
IGNITION TIMING.....	2-52	MEASURING TOOLS.....	1-25
THROTTLE CABLE.....	2-52	DEPTH GAUGES.....	1-26
5 HP (2-STROKE).....	2-53	DIAL INDICATORS.....	1-26
IDLE SPEED.....	2-53	MICROMETERS & CALIPERS.....	1-25
IGNITION TIMING.....	2-53	TELESCOPING GAUGES.....	1-26
		OTHER COMMON TOOLS.....	1-22
		SPECIAL TOOLS.....	1-23
		TRIM MOTOR & PUMP.....	8-25
		REMOVAL & INSTALLATION.....	8-26
		TESTING.....	8-25

<p>TRIM ROD & CAP (3-RAM SYSTEMS ONLY) 8-18 REMOVAL & INSTALLATION 8-22</p> <p>TRIM SENDER & GAUGE 8-28 TESTING 8-28</p> <p>TROUBLESHOOTING</p> <p>AUTOMIX 5-2 BASIC OPERATING PRINCIPLES 1-13 CARBURETOR 3-13 CHARGING CIRCUIT 4-31 COMBUSTION 1-16 COOLING SYSTEM 5-23 ELECTRICAL SYSTEMS 4-6 ELECTRONIC FUEL INJECTION 3-38 HAND REWIND STARTER 10-2 IGNITION SYSTEM 4-10 LOWER UNIT 7-2 POWER TRIM/TILT SYSTEMS 8-12 REMOTE CONTROLS 9-13 STARTING CIRCUIT 4-40 TILLER HANDLE 9-2 WARNING SYSTEM 4-49 2-STROKE MOTORS 1-13 4-STROKE MOTORS 1-16</p> <p>TUNE-UP 2-39 COMPRESSION TESTS 2-41 DE-CARBONING THE PISTONS 2-40 IGNITION SYSTEMS 2-48 INTRODUCTION 2-39 SPARK PLUG WIRES 2-48 SPARK PLUGS 2-43 TUNE-UP SEQUENCE 2-39</p> <p>TUNE-UP SEQUENCE 2-39</p> <p>TWO-STROKE LOW-PRESSURE DIRECT INJECTION (TLDI) 3-37</p> <p>UNDER-FLYWHEEL IGNITION & CHARGE COIL EXPLODED VIEWS 4-16 2-STROKE MODELS 4-16 4-STROKE MODELS 4-18</p> <p>UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS 4-2 BASIC ELECTRICAL THEORY 4-2 ELECTRICAL COMPONENTS 4-2 ELECTRICAL SYSTEM PRECAUTIONS 4-8 ELECTRICAL TESTING 4-7 TEST EQUIPMENT 4-5 TROUBLESHOOTING ELECTRICAL SYSTEMS 4-6 WIRE & CONNECTOR REPAIR 4-8</p> <p>VALVE LASH 2-72 ADJUSTMENT 2-73</p>	<p>VALVE CLEARANCE (4-STROKE MODELS) 2-72 VALVE LASH 2-72</p> <p>VAPOR SEPARATOR TANK (VST) ASSEMBLY 3-49 OVERHAUL 3-50 REMOVAL & INSTALLATION 3-49</p> <p>WARNING BUZZER/HORN 9-8</p> <p>WARNING BUZZER/LAMP 4-54 TESTING 4-54</p> <p>WARNING SYSTEM 4-49 DESCRIPTION & OPERATION 4-49 ENGINE TEMPERATURE SENSORS (EFI/TLDI) 4-51 ENGINE TEMPERATURE SWITCHES (CARBURETED) 4-51 OIL LEVEL SWITCH (OIL INJECTED 2-STROKES) 4-53 OIL PRESSURE SWITCH (4-STROKE ONLY) 4-52 TROUBLESHOOTING 4-49 WARNING BUZZER/LAMP 4-54 WATER PRESSURE SWITCH (60-140 HP CARB 2-STROKE ONLY) 4-54</p> <p>WATER PRESSURE SWITCH (60-140 HP CARB 2-STROKE ONLY) 4-54 TESTING & SERVICE 4-54</p> <p>WATER PUMP 5-28 INSPECTION & OVERHAUL 5-33 REMOVAL & INSTALLATION 5-28 2.5/3.5 HP (NON-SHIFTING) MODELS 5-28 2-140 HP (SHIFTING) MODELS 5-30</p> <p>WINTERIZATION 2-77 PREPPING FOR STORAGE 2-77 STORAGE CHECKLIST 2-78 THE GREAT ETHANOL DEBATE 2-77 WHERE TO STORE 2-77</p> <p>WIRE & CONNECTOR REPAIR 4-8</p> <p>WIRING DIAGRAMS 4-55 INDEX 4-55 CARBURETED 2-STROKE MOTORS 4-55 CARBURETED 4-STROKE MOTORS 4-72 EFI/TLDI MOTORS 4-80 PTT 8-13 REMOTE CONTROL 9-8</p> <p>ZINCS 2-29 INSPECTION 2-30 LOCATION & GENERAL INFORMATION 2-29 SERVICING 2-30</p>
--	--