

CONTENTS

1	GENERAL INFORMATION AND BOATING SAFETY	HOW TO USE THIS MANUAL	1-1
		BOATING SAFETY	1-3
		SAFETY IN SERVICE	1-10
2	TOOLS AND EQUIPMENT	TOOLS AND EQUIPMENT	2-1
		TOOLS	2-3
		FASTENERS, MEASUREMENTS AND CONVERSATIONS	2-10
3	MAINTENANCE	ENGINE & DRIVE MAINTENANCE	3-2
		FLUIDS AND LUBRICANTS	3-27
		LUBRICATION POINTS	3-39
		BOAT MAINTENANCE	3-46
		WINTER STORAGE	3-51
		SPRING COMMISSIONING	3-51
		FIRING ORDERS	3-52
SPECIFICATION CHARTS	3-53		
4	ENGINE MECHANICAL 4 CYLINDER	ENGINE MECHANICAL	4-2
		SPECIFICATION CHARTS	4-9
5	ENGINE MECHANICAL V6 & V8	ENGINE MECHANICAL	5-2
		SPECIFICATION CHARTS	5-24
6	ENGINE OVERHAUL	ENGINE RECONDITIONING	6-2
7	FUEL SYSTEMS CARBURETORS	FUEL AND COMBUSTION	7-2
		CARBURETED FUEL SYSTEM	7-3
		CARBURETOR SPECIFICATIONS	7-33
		APPLICATION CHART	7-4
8	FUEL SYSTEMS FUEL INJECTION	FUEL AND COMBUSTION	8-2
		ELECTRONIC FUEL INJECTION	8-3
		SYSTEM DIAGNOSIS	8-26
		VACUUM DIAGRAMS	8-39
		WIRING SCHEMATICS	8-41
		ECM PIN LOCATIONS	8-54
		DIAGNOSTIC TROUBLE CODES	8-65
SPECIFICATIONS	8-68		
9	COOLING SYSTEM	COOLING SYSTEMS	9-2
		MAINTENANCE AND TESTING	9-2
		DRAIN DIAGRAMS	9-14
		FLOW DIAGRAMS	9-18

CONTENTS

UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS	10-2	IGNITION AND ELECTRICAL SYSTEMS 10
BATTERY	10-9	
CHARGING SYSTEM	10-11	
STARTER CIRCUIT	10-24	
BREAKER POINT		
IGNITION SYSTEM	10-36	
DIGITAL DISTRIBUTORLESS IGNITION SYSTEM (DDIS)	10-42	
ELECTRONIC SPARK		
TIMING SYSTEM (EST)	10-44	
THUNDERBOLT IGNITION SYSTEM	10-49	
INSTRUMENTS AND GAUGES	10-55	
SENDING UNITS AND SWITCHES	10-59	
WIRING DIAGRAMS	10-62	
SPECIFICATIONS	10-105	
STERN DRIVE UNIT-ALPHA	11-2	DRIVE SYSTEMS ALPHA 11
GEAR HOUSING (LOWER UNIT)	11-5	
DRIVESHAFT HOUSING (UPPER HOUSING)	11-19	
TRANSOM ASSEMBLY	11-27	
SPECIFICATIONS	11-40	
STERN DRIVE UNIT BRAVO/BLACKHAWK	12-2	DRIVE SYSTEMS BRAVO/BLACKHAWK 12
GEAR HOUSING (LOWER UNIT)	12-5	
DRIVESHAFT HOUSING (UPPER HOUSING)	12-24	
TRANSOM ASSEMBLY	12-35	
SPECIFICATIONS	12-49	
BORG WARNER/VELVET TRANSMISSIONS	13-2	DRIVE SYSTEMS TRANSMISSIONS 13
HURTH/ZF TRANSMISSIONS	13-10	
WALTER TRANSMISSIONS	13-15	
SPECIFICATIONS	13-16	
POWER TRIM AND TILT	14-2	TRIM AND TILT 14
WIRING SCHEMATICS	14-30	
MANUAL STEERING SYSTEM	15-2	STEERING 15
POWER STEERING SYSTEM	15-4	
COMPACT HYDRAULIC SYSTEM	15-23	
GLOSSARY	15-25	GLOSSARY
MASTER INDEX	15-28	MASTER INDEX

15-28 MASTER INDEX

ALTERNATOR	10-12	DRAINING FLUID	13-6
PRECAUTIONS	10-12	TRANSMISSION	13-8
CHARGING SYSTEM INSPECTION	10-12	REMOVAL & INSTALLATION	13-8
TESTING	10-12	PUMP INDEXING	13-9
REMOVAL & INSTALLATION	10-18	BREAKER POINT IGNITION SYSTEM	10-36
DISASSEMBLY	10-18	DESCRIPTION	10-36
CLEANING	10-22	TROUBLESHOOTING	10-37
ASSEMBLY	10-23	GENERAL TESTS	10-37
ANODES (ZINCS)	3-46	IGNITION VOLTAGE TESTS	10-38
SERVICING	3-47	DISTRIBUTOR CAP AND ROTOR	10-39
INSPECTION	3-48	REMOVAL & INSTALLATION	10-39
AUDIO WARNING SYSTEM	10-60	DISTRIBUTOR	10-39
AVOIDING THE MOST COMMON MISTAKES	1-3	REMOVAL	10-39
AVOIDING TROUBLE	1-2	INSTALLATION	10-40
BALANCE SHAFT	5-19	DISASSEMBLY & ASSEMBLY	10-40
REMOVAL & INSTALLATION	5-19	IGNITION COIL	10-41
BASIC ELECTRICAL THEORY	10-2	REMOVAL & INSTALLATION	10-41
HOW ELECTRICITY WORKS:		BUY OR REBUILD?	6-2
THE WATER ANALOGY	10-2	CAMSHAFT AND GEAR	4-6
OHM'S LAW	10-2	REMOVAL & INSTALLATION	4-6
BATTERIES	3-48	CAMSHAFT	5-20
CLEANING	3-48	REMOVAL & INSTALLATION	5-20
CHECKING SPECIFIC GRAVITY	3-49	CAN YOU DO IT?	1-2
BATTERY TERMINALS	3-49	CARBURETED FUEL SYSTEM	7-3
BATTERY & CHARGING		TROUBLESHOOTING	7-3
SAFETY PRECAUTIONS	3-50	COMMON PROBLEMS	7-3
BATTERY CHARGERS	3-50	COMBUSTION RELATED	
REPLACING BATTERY CABLES	3-50	PISTON FAILURES	7-5
STORAGE	3-50	CARBURETOR APPLICATION CHART	7-4
BATTERY CONSTRUCTION	10-9	CARBURETOR CIRCUITS	7-6
MARINE BATTERIES	10-9	CARBURETOR SPECIFICATIONS	7-33
BATTERY RATINGS	10-9	CHARGING SYSTEM	10-11
BATTERY LOCATION	10-10	GENERAL INFORMATION	10-11
DUAL BATTERY INSTALLATION	10-10	CHEMICALS	2-2
BATTERY CHARGERS	10-10	LUBRICANTS & PENETRANTS	2-2
BATTERY CABLES	10-10	SEALANTS	2-3
BATTERY GAUGE	10-57	CLEANERS	2-3
TESTING	10-57	COMBINATION MANIFOLD	4-4
REMOVAL & INSTALLATION	10-57	REMOVAL & INSTALLATION	4-4
BATTERY	10-9	COMBUSTION	7-2
BELL HOUSING	11-32	COMBUSTION	8-2
REMOVAL & INSTALLATION	11-32	COMPACT HYDRAULIC SYSTEM	15-23
BELL HOUSING	12-40	HYDRAULIC FLUID	15-23
REMOVAL & INSTALLATION	12-40	FILLING/PURGING THE SYSTEM	15-23
BELTS	3-8	CHECKING THE LEVEL	15-23
INSPECTION	3-8	CONTROL VALVE	15-15
ADJUSTMENT	3-8	REMOVAL & INSTALLATION	15-15
REMOVAL & INSTALLATION	3-10	DISASSEMBLY & ASSEMBLY	15-15
BOAT MAINTENANCE	3-46	BALANCING	15-16
BOATING SAFETY	1-3	COOL FUEL SYSTEM	8-9
BOLTS, NUTS AND OTHER		REMOVAL & INSTALLATION	8-9
THREADED RETAINERS	2-10	COOLING SYSTEM	3-31
BOOSTER CYLINDER	15-17	LEVEL CHECK	3-31
REMOVAL & INSTALLATION	15-17	FLUSHING THE SYSTEM	3-31
TESTING	15-17	COOLING SYSTEMS	9-2
BORG-WARNER/VELVET		DESCRIPTION & OPERATION	9-2
TRANSMISSIONS	13-2	SEAWATER SYSTEM	9-2
IDENTIFICATION	13-2	CLOSED SYSTEM	9-2
SHIFT CABLE	13-3	COURTESY MARINE EXAMINATIONS	1-10
ADJUSTMENT	13-3	CRANKSHAFT PULLEY	
TRANSMISSION FLUID	13-6	TORSIONAL DAMPER	5-17

REMOVAL & INSTALLATION	5-17	DESCRIPTION	12-24
CROSSOVER	9-6	DRIVESHAFT HOUSING (UPPER UNIT)	12-25
REMOVAL & INSTALLATION	9-6	REMOVAL & INSTALLATION	12-25
CRUISELOG	10-57	ASSEMBLY & DISASSEMBLY	12-26
TESTING	10-57	DUAL POWER TRIM SYSTEM	14-29
REMOVAL & INSTALLATION	10-58	RELAY REPLACEMENT	14-29
CYLINDER COMPRESSION	3-17	DIODE MODULE REPLACEMENT	14-29
CHECKING COMPRESSION	3-17	ECM PIN LOCATIONS	8-54
CYLINDER HEAD	5-21	ELECTRIC FUEL PUMP	7-33
REMOVAL & INSTALLATION	5-21	DESCRIPTION	7-33
CYLINDER HEAD COVER	4-3	REMOVAL & INSTALLATION	7-33
REMOVAL & INSTALLATION	4-3	PRESSURE TEST	7-33
CYLINDER HEAD COVER	5-8	ELECTRICAL COMPONENTS	10-2
REMOVAL & INSTALLATION	5-8	POWER SOURCE	10-2
CYLINDER HEAD	4-7	GROUND	10-3
REMOVAL & INSTALLATION	4-7	PROTECTIVE DEVICES	10-3
CYLINDER HEAD	6-5	SWITCHES & RELAYS	10-3
DISASSEMBLY	6-6	LOAD	10-4
INSPECTION	6-6	WIRING & HARNESSSES	10-4
REFINISHING & REPAIRING	6-10	CONNECTORS	10-4
ASSEMBLY	6-11	ELECTRONIC CONTROL MODULE (ECM)	8-22
DETERMINING ENGINE CONDITION	6-2	REMOVAL & INSTALLATION	8-22
COMPRESSION TEST	6-2	ELECTRONIC FUEL INJECTION	8-3
OIL PRESSURE TEST	6-2	DESCRIPTION AND OPERATION	8-3
DIAGNOSTIC TROUBLE CODES (DTC)	8-30	MODES OF OPERATION	8-3
READING CODES	8-30	SUBSYSTEMS	8-4
CLEARING CODES	8-30	RELIEVING FUEL PRESSURE	8-9
CODE 14	8-30	ELECTRONIC SPARK TIMING SYSTEM (EST)	10-44
CODE 15	8-31	DESCRIPTION	10-44
CODE 21	8-31	TROUBLESHOOTING	10-44
CODE 22	8-33	VISUAL CHECKS	10-44
CODE 23	8-33	IGNITION COIL	10-44
CODE 25	8-34	PICK-UP COIL	10-46
CODE 33	8-34	IGNITION MODULE	10-46
CODE 34	8-35	DISTRIBUTOR CAP	10-46
CODE 41	8-35	REMOVAL & INSTALLATION	10-46
CODE 42	8-36	DISTRIBUTOR	10-46
CODE 43	8-36	REMOVAL	10-46
CODE 44	8-37	INSTALLATION	10-47
CODE 45	8-37	DISASSEMBLY	10-47
CODE 51	8-38	CLEANING AND INSPECTING	10-48
CODE 52	8-38	REMOVAL & INSTALLATION	10-48
CODE 61	8-38	ASSEMBLY	10-48
CODE 62	8-38	IGNITION COIL	10-48
DIAGNOSTIC TROUBLE CODES	8-65	ELECTRONIC TOOLS	2-7
DIGITAL DISTRIBUTORLESS		BATTERY TESTERS	2-7
IGNITION SYSTEM (DDIS)	10-42	BATTERY CHARGERS	2-8
DESCRIPTION	10-42	MULTIMETERS	2-8
TROUBLESHOOTING	10-42	GAUGES	2-8
PRECAUTIONS	10-42	EMERGENCY (LANYARD) STOP SWITCH	10-60
IGNITION AMPLIFIER	10-42	ENGINE	5-3
IGNITION COIL	10-42	REMOVAL & INSTALLATION	5-3
DIRECTIONS AND LOCATIONS	1-2	ENGINE AND DRIVE MAINTENANCE	3-2
DRAIN DIAGRAMS	9-14	ENGINE BLOCK	6-11
DRIVE BELTS	9-6	GENERAL INFORMATION	6-11
DRIVESHAFT HOUSING (UPPER UNIT)	11-19	DISASSEMBLY	6-12
REMOVAL & INSTALLATION	11-19	INSPECTION	6-12
ASSEMBLY & DISASSEMBLY	11-20	REFINISHING	6-14
DRIVESHAFT HOUSING (UPPER UNIT)	11-19	ASSEMBLY	6-15
DESCRIPTION	11-19	ENGINE COOLANT	
GEAR RATIO IDENTIFICATION	11-19	TEMPERATURE SENSOR (ECT)	8-22
DRIVESHAFT HOUSING (UPPER UNIT)	12-24	REMOVAL & INSTALLATION	8-22

15-30 MASTER INDEX

ENGINE COUPLER/U-JOINT SPLINES	3-43	FUEL FILTER	3-5
ENGINE IDENTIFICATION	4-2	REMOVAL & INSTALLATION	3-5
ENGINE IDENTIFICATION	5-2	FUEL GAUGE	10-56
ALL ENGINES EXC. 8.1L V8	5-2	HOOKEUP	10-56
8.1L V8 ENGINES	5-3	TROUBLESHOOTING	10-56
ENGINE MECHANICAL 4 CYLINDER	4-2	TESTING	10-57
ENGINE MECHANICAL V6 & V8	5-2	REMOVAL & INSTALLATION	10-57
ENGINE OIL	3-27	FUEL INJECTORS	8-12
OIL LEVEL CHECK	3-28	REMOVAL & INSTALLATION	8-12
OIL & FILTER CHANGE	3-28	FUEL METER COVER	8-12
ENGINE OVERHAUL TIPS	6-3	REMOVAL & INSTALLATION	8-12
TOOLS	6-3	FUEL PRESSURE DAMPER	8-12
OVERHAUL TIPS	6-3	REMOVAL & INSTALLATION	8-12
CLEANING	6-3	FUEL PRESSURE REGULATOR	8-13
REPAIRING DAMAGED THREADS	6-4	REMOVAL & INSTALLATION	8-13
ENGINE PREPARATION	6-5	FUEL PUMP RELAY	8-13
ENGINE RECONDITIONING	6-2	REMOVAL & INSTALLATION	8-13
ENGINE START-UP AND BREAK-IN	6-18	FUEL PUMP-ELECTRIC	8-14
STARTING THE ENGINE	6-18	REMOVAL & INSTALLATION	8-14
BREAKING IT IN	6-18	FUEL PUMP-MANUAL	8-14
KEEP IT MAINTAINED	6-18	REMOVAL & INSTALLATION	8-14
ENGINE	4-2	FUEL RAIL AND INJECTORS	8-14
REMOVAL & INSTALLATION	4-2	REMOVAL & INSTALLATION	8-14
EQUIPMENT NOT REQUIRED		INJECTOR BALANCE TEST	8-16
BUT RECOMMENDED	1-9	FUEL TANK SENDING UNIT	10-59
SECOND MEANS OF PROPULSION	1-9	FUEL	7-1
BAILING DEVICES	1-9	OCTANE RATING	7-2
FIRST AID KIT	1-9	VAPOR PRESSURE	7-2
ANCHORS	1-10	ALCOHOL-BLENDED FUELS	7-2
VHF-FM RADIO	1-10	HIGH ALTITUDE OPERATION	7-2
TOOLS AND SPARE PARTS	1-10	RECOMMENDATIONS	7-2
EXHAUST BELLOWS	11-30	FUEL/WATER SEPARATOR	3-7
REMOVAL & INSTALLATION	11-30	SERVICE	3-7
EXHAUST BELLOWS	12-38	GEAR HOUSING (LOWER UNIT) BLACKHAWK	12-19
REMOVAL & INSTALLATION	12-38	REMOVAL & INSTALLATION	12-19
EXHAUST MANIFOLD	5-14	DISASSEMBLY	12-19
REMOVAL & INSTALLATION	5-14	CLEANING AND INSPECTING	12-21
FASTENERS, MEASUREMENTS		ASSEMBLY	12-21
AND CONVERSIONS	2-10	GEAR HOUSING (LOWER UNIT)	11-5
FIRING ORDERS	3-52	DESCRIPTION	11-5
FLAME ARRESTOR	3-3	GEAR HOUSING (LOWER UNIT)	11-6
REMOVAL & INSTALLATION	3-3	REMOVAL & INSTALLATION	11-6
FLOW DIAGRAMS	9-18	DISASSEMBLY	11-7
FLUID DISPOSAL	3-27	CLEANING AND INSPECTING	11-11
FLUIDS AND LUBRICANTS	3-27	ASSEMBLY	11-11
FLYWHEEL	4-8	GEAR HOUSING (LOWER UNIT)	12-5
REMOVAL & INSTALLATION	4-8	DESCRIPTION	12-5
FLYWHEEL	5-23	GEAR HOUSING (LOWER UNIT)—BRAVO I/II	12-5
REMOVAL & INSTALLATION	5-23	REMOVAL & INSTALLATION	12-5
FRONT COVER AND OIL SEAL	5-18	DISASSEMBLY	12-6
REMOVAL & INSTALLATION	5-18	CLEANING AND INSPECTING	12-11
FRONT COVER, OIL SEAL		ASSEMBLY	12-11
FUEL AND COMBUSTION CARBURETOR	7-2	GEAR HOUSING (LOWER UNIT)—BRAVO III	12-12
FUEL AND COMBUSTION FUEL INJECTION	8-2	REMOVAL & INSTALLATION	12-12
FUEL	8-2	DISASSEMBLY	12-13
OCTANE RATING	8-2	CLEANING AND INSPECTING	12-17
VAPOR PRESSURE	8-2	ASSEMBLY	12-17
ALCOHOL-BLENDED FUELS	8-2	GEAR RATIO IDENTIFICATION	12-24
RECOMMENDATIONS	8-2	GENERAL DIAGNOSTIC TESTS	8-27
FUEL AND OIL RECOMMENDATIONS	3-27	ON-BOARD DIAGNOSTIC SYSTEM CHECK	8-27
FUEL	3-27	GENERAL INFORMATION	4-2
FUEL BOOST PUMP (ELECTRIC)	8-11	4 CYLINDER ENGINES	4-2
REMOVAL & INSTALLATION	8-11	GENERAL INFORMATION	5-2

4.3L V6 ENGINES	5-2	DRAINING & FILLING	9-3
V8 ENGINES	5-2	MAINTENANCE OR REPAIR?	1-2
GENERAL SYSTEM TROUBLESHOOTING	10-12	MANIFOLD ABSOLUTE PRESSURE	
ALTERNATOR FAILS TO CHARGE	10-12	SENSOR (MAP)	8-25
ALTERNATOR CHARGES		REMOVAL & INSTALLATION	8-25
LOW OR UNSTEADY	10-12	MANUAL STEERING SYSTEM	15-2
ALTERNATOR OUTPUT TOO HIGH BATTERY		MASTER INDEX	15-28
OVERCHARGED	10-12	MEASURING TOOLS	2-9
ALTERNATOR TOO NOISY	10-12	MICROMETERS & CALIPERS	2-9
AMMETER FLUCTUATES CONSTANTLY	10-12	DIAL INDICATORS	2-10
GIMBAL BEARING	11-27	TELESCOPING GAUGES	2-10
REMOVAL	11-27	DEPTH GAUGES	2-10
GIMBAL BEARING	12-36	MECHANICAL FUEL PUMP	7-31
REMOVAL & INSTALLATION	12-36	DESCRIPTION	7-31
GIMBAL HOUSING/TRANSOM PLATE	11-38	REMOVAL & INSTALLATION	7-32
REMOVAL & INSTALLATION	11-38	PRESSURE TEST	7-32
GIMBAL HOUSING/TRANSOM PLATE	12-46	FUEL LINE TEST	7-32
REMOVAL & INSTALLATION	12-46	MERCARB 2BBL CARBURETOR	7-7
GIMBAL RING	11-34	DESCRIPTION	7-7
REMOVAL & INSTALLATION	11-34	REMOVAL & INSTALLATION	7-7
GIMBAL RING	12-42	ADJUSTMENT	7-8
REMOVAL & INSTALLATION	12-42	DISASSEMBLY	7-10
GLOSSARY	15-25	CLEANING & INSPECTION	7-10
HAND TOOLS	2-4	ASSEMBLY	7-14
SOCKET SETS	2-4	MOTION SENSOR	10-43
WRENCHES	2-5	SHIFT INTERRUPTOR SWITCH	10-43
PLIERS	2-6	MOTION SENSOR	10-43
SCREWDRIVERS	2-6	REMOVAL & INSTALLATION	10-43
HAMMERS	2-6	IGNITION AMPLIFIER	10-43
HEAT EXCHANGER	9-6	REMOVAL & INSTALLATION	10-43
CLEANING	9-6	IGNITION COIL	10-43
TESTING	9-6	REMOVAL & INSTALLATION	10-43
HOW TO USE THIS MANUAL	1-2	OIL AND TEMPERATURE GAUGES	10-55
HURTH/ZF TRANSMISSIONS	13-10	TROUBLESHOOTING	10-55
SHIFT CABLE	13-10	TESTING	10-56
ADJUSTMENT	13-10	REMOVAL & INSTALLATION	10-56
TRANSMISSION FLUID	13-12	OIL PAN	4-5
DRAINING FLUID	13-12	REMOVAL & INSTALLATION	4-5
TRANSMISSION	13-14	OIL PAN	5-15
REMOVAL & INSTALLATION	13-14	REMOVAL & INSTALLATION	5-15
IDLE AIR CONTROL VALVE (IAC)	8-22	OIL PRESSURE SENDING UNIT	10-59
REMOVAL & INSTALLATION	8-22	OIL PRESSURE SWITCH	10-60
IDLE SPEED AND MIXTURE	3-25	OIL PUMP	4-5
ADJUSTMENT	3-25	REMOVAL & INSTALLATION	4-5
IGNITION SWITCH	10-59	OIL PUMP	5-17
IGNITION SYSTEM	10-36	REMOVAL & INSTALLATION	5-17
IGNITION TIMING	3-22	OPERATION	7-5
ADJUSTMENT	3-22	BASIC FUNCTIONS	7-5
INSIDE THE BOAT	3-46	FUEL & AIR METERING	7-5
INSTRUMENTS AND GAUGES	10-55	OTHER COMMON TOOLS	2-6
INTAKE AIR TEMPERATURE SENSOR (IAT)	8-24	PCV VALVE	3-27
REMOVAL & INSTALLATION	8-24	REMOVAL & INSTALLATION	3-27
INTAKE MANIFOLD	5-10	INSPECTION	3-27
REMOVAL & INSTALLATION	5-10	POWER STEERING COOLER	15-22
KNOCK SENSOR (KS)	8-25	REMOVAL & INSTALLATION	15-22
REMOVAL & INSTALLATION	8-25	POWER STEERING PUMP	15-18
LANYARD STOP CIRCUIT CHECK	8-29	REMOVAL & INSTALLATION	15-18
LINKAGE PIVOT POINTS	3-40	FLOW CONTROL VALVE SERVICE	15-19
LUBRICATION POINTS	3-39	PUMP PULLEY	15-20
MAINTENANCE AND TESTING	9-2	OIL SEAL REPLACEMENT	15-20
COOLING SYSTEM	9-2	DISASSEMBLY & ASSEMBLY	15-21
PRESSURE TEST	9-3	POWER STEERING SYSTEM	15-4