

TABLE OF CONTENTS

1 SAFETY

INTRODUCTION	1-1
CLEANING, WAXING, POLISHING	1-1
CONTROLLING CORROSION	1-1
Using Zinc	1-2
PROPELLERS	1-2
FUEL SYSTEM	1-8
LOADING	1-10
FLOTATION	1-11
HORSEPOWER	1-11
EMERGENCY EQUIPMENT	1-13
COMPASS	1-15
STEERING	1-18
ANCHORS	1-18
MISCELLANEOUS EQUIPMENT	1-18
BOATING ACCIDENT REPORTS	1-19
NAVIGATION	1-19

2 TUNING

INTRODUCTION	2-1
TUNING FOR PERFORMANCE	2-1
IGNITION	2-5
FUEL SYSTEM	2-8

3 ENGINE

GENERAL PRINCIPLES	3-1
Valve Timing	3-3
Engine Types	3-3
Service Procedures	3-3
Troubleshooting Mechanical	
Engine Problems	3-6
GMC IN-LINE ENGINES	3-8
Removal	3-8
Installation	3-9
Oil Pump	3-10
Intake Manifold	3-10
Exhaust Manifold	3-11
Cylinder Head Service	3-11
Reconditioning	3-18
Installation	3-19
Valve Lash Adjustment	3-20

Piston Ring and Rod Service	3-21
Disassembling	3-22
Assembling	3-24
Installation	3-27
Camshaft Service	3-28
Removal	3-29
Installation	3-31
Crankcase Front Cover	3-32
Crankshaft Service	3-33

GMC V6 ENGINES	3-36
Removal	3-36
Installation	3-36
Oil Pump	3-37
Exhaust Manifolds	3-38
Intake Manifold	3-38
Cylinder Head Service	3-39
Removal	3-39
Installation	3-44
Piston and Rod Service	3-46
Camshaft Service	3-51
Removal	3-51
Installation	3-51
Main Bearings	3-55
Rear Bearing Oil Seal	3-56
Timing Chain Service	3-57

GMC V8 ENGINES	3-60
Removal	3-60
Installation	3-60
Oil Pump	3-62
Intake Manifold	3-63
Exhaust Manifolds	3-64
Cylinder Head Service	3-65
Removal	3-65
Installation Prep.	3-71
Installation	3-71
Valve Lash Adjustment	3-72
Piston and Rod Service	3-73
Camshaft Service	3-80
Removal	3-80
Installation	3-81

GMC V8 ENGINES (Continued)

Crankshaft Service	3-81
Removal	3-81
Installation	3-84
Main Bearings	3-85
Timing Chain	3-87

FORD V8 ENGINES

Removal	3-89
Installation	3-89
Oil Pump	3-90
Exhaust Manifolds	3-91
Intake Manifold	3-92
Cylinder Head Service	3-93
Removal	3-93
Assembling	3-100
Installation	3-100
Checking Hydraulic Lifter Clearance	3-101
Piston and Rod Service	3-103
Camshaft Service	3-109
Removal	3-110
Installation	3-112

Crankshaft Service	3-113
Removal	3-113
Installation	3-114
Main Bearings	3-117
Timing Chain	3-118

4 FUEL

TROUBLESHOOTING	4-1
Fuel Pump	4-2
Fuel Line	4-2
Rough Engine Idle	4-3
Excessive Fuel Consumption	4-3
Engine Surge	4-3
SINGLE-DIAPHRAGM FUEL PUMP	4-3
DUAL-DIAPHRAGM FUEL PUMP	4-4
FUEL FILTER REPLACEMENT	4-6
CARBURETORS	4-7
Rochester BC Carburetor	4-10
Removal	4-10
Assembling	4-12
Adjusting	4-14
Carter RBS Carburetor	4-15
Description & Operation	4-15
Disassembling	4-18
Assembling	4-22
Bench Adjustments	4-27
Rochester 2GC	4-27
Disassembling	4-27
Assembling	4-30
Bench Adjustments	4-33

Rochester 4MV	4-35
Description	4-35
Disassembling	4-39
Assembling	4-41
Bench Adjustments	4-45
Holley	4-50
Description	4-50
Disassembling	4-55
Assembling	4-58
Adjustments	4-61

5 IGNITION

DESCRIPTION	5-1
TROUBLESHOOTING	5-3
Compression	5-3
General Tests	5-4
Primary Circuit Tests	5-4
Contact Point Test	5-5
Condenser Test	5-5
Secondary Circuit Test	5-6
Rotor Test	5-6
Ignition Voltage Tests	5-6
Spark Plug Troubleshooting	5-9
Polarity Check	5-12
DISTRIBUTOR SERVICE	5-12
Removal	5-14
SERVICING A DELCO-REMY	5-14
Disassembling - from a 4- or 6-cylinder in-line engine	5-14
Assembling	5-16
Disassembling from a GMC V6 1964-72 or V8	5-16
Assembling	5-19
Gapping Contact Points	5-19
SERVICING A MALLORY	5-20
Disassembling from All V6 and V8 engines 1981 and on	5-20
Assembling	5-22
SERVICING AN AUTOLITE OR PRESTOLITE	5-22
Disassembling	5-22
Assembling	5-24
ADJUSTING POINT GAP ALL DISTRIBUTOR INSTALLATION	5-25
Adjusting the Dwell	5-27
Adjusting Timing	5-27
Adjusting Idle Speed and Mixture	5-30

6 ELECTRICAL

INTRODUCTION	6-1
BATTERIES	6-1
JUMPER CABLES	6-5
DUAL BATTERY INSTALLATION	6-6
GAUGES AND HORNS	6-7
Oil and Temperature Gauges	6-7
Warning Lights	6-7
Fuel Gauges	6-8
Troubleshooting	6-10
Tachometer	6-10
Horns	6-11
CHARGING SYSTEM	6-11
Alternator	6-12
Troubleshooting	6-13
Servicing Charging System with Separate Regulator	6-16
Servicing Charging System with Integral Regulator	6-18
CRANKING SYSTEM	6-21
Troubleshooting	6-21
Delco-Remy Starter	6-25
Description & Operation	6-25
Servicing	6-26
Testing	6-26
Assembling	6-30
Autolite Starter	6-31
Description & Operation	6-32
Disassembling	6-32
Bench Tests	6-33
Assembling	6-35
Prestolite Starter	6-36
Description & Operation	6-36
Disassembling	6-36
Assembling	6-38

7 ACCESSORIES

INTRODUCTION	7-1
SHIFT BOXES	7-1
Troubleshooting	7-1
Single- and Side-Mount Boxes	7-4
Removal & Repair	7-4
Push Button Shift Box	7-5
Removal & Repair	7-5
Binnacle-Mounted Shift Box	7-6
Removal & Repair	7-7

THROTTLE CABLE INSTALLATION	7-8
SELECTRIM FOR IN-LINE ENGINES	7-9
Description & Operation	7-9
Removal & Disassembling	7-10
Assembling	7-15
Installation	7-18

SELECTRIM FOR FORD V8 ENGINES	7-19
Description & Operation	7-19
Removal & Disassembling	7-20
Cylinder Disassembling	7-21
Cylinder Assembling	7-22
Installation	7-23
HYDRAULIC PUMP & MOTOR	7-24
Removal	7-24
Disassembling	7-25
Assembling	7-26
Installation	7-27
Replacing Manual Release Valve	7-27
Adding Fluid or Filling a Dry System	7-27
Electrical Checks	7-28
TRU-COURSE STEERING	7-28
Description & Operation	7-28
Disassembling	7-29
Assembling	7-30
Cable Drum-and-Bracket Disassembling	7-31
Assembling	7-32
Adjustments	7-33
MECHANICAL STEERING	7-34
Cable Removal	7-35
Cable Installation	7-36
OVER-UNDER STEERING HELM	7-37
Description	7-37
Cable Replacement	7-37
Helm Installation	7-38
FINAL CHECKS & ADJUSTMENTS	7-40

8 TILT MECHANISM

DESCRIPTION AND OPERATION	8-1
TROUBLESHOOTING	8-2
TILT MOTOR SERVICE	8-3
Removal	8-3
Testing	8-4
Disassembling	8-5
Assembling	8-7
Installation	8-8
HAMMER BLOW COUPLING	8-9
TILT CLUTCH & WORM GEAR	8-9
Disassembling	8-10
Assembling & Installation	8-11

9 COOLING

DESCRIPTION	9-1
TROUBLESHOOTING	9-6
EXHAUST MANIFOLDS	9-11
THERMOSTAT REPLACEMENT	9-12
WATER PUMP REMOVAL	9-12
Assembling	9-15

10 STERN DRIVE

DESCRIPTION	10-1
EARLY STERN DRIVE	
UNITS 1964-77	10-1
Troubleshooting	10-3
Removal	10-4
Upper Gear Housing Removal	10-7
Water Pump Removal	10-8
Ball Gear Disassembling	10-9
Bearing Housing	
Disassembling	10-10
Worm Gear Steering	
Disassembly	10-11
Ball Gear Assembling	10-14
Bearing Housing Assembling	10-15
Water Pump Assembling	10-18
Exhaust Housing Removal	10-19
Swivel Housing Removal	10-21
Lower Unit	
Removal & Disassembling	10-22
Assembling	10-28
Swivel Housing Assembling	10-37
Exhaust Housing Assembling	10-38
Upper Gear Housing	
Installation	10-41
Stern Drive Installation	10-44
STERN DRIVE	
UNITS SINCE 1978	10-47
Troubleshooting	10-47
Shift Converter Service	10-50
Cable Removal	10-50
Disassembling	10-51
Assembling	10-52
Stern Drive Removal	10-52
Upper Gear Housing Removal	10-54
Water Pump Removal	10-55
Ball Gear Disassembling	10-56
Bearing Housing	
Disassembling	10-58
Worm Gear Steering	
Disassembling	10-59
Ball Gear Assembling	10-62
Bearing Housing Assembling	10-63
Water Pump Assembling	10-65
Exhaust Housing Removal	10-66
Swivel Housing Removal	10-67
Swivel Housing Assembling	10-68
Lower Unit	
Removal & Disassembling	10-68
Assembling	10-74
Propeller Shaft	10-74
Driveshaft Bearing	
Housing	10-74

Oil Pump & Forward Gear	
Disassembling	10-74
Assembling	10-76
Propeller Shaft and	
Shifter Disassembling	10-77
Assembling	10-78
Power Assist Servo	
Disassembling	10-80
Assembling	10-80
Shift Cable Removal	
or Replacement	10-81
Assembling	10-82
Pinion Bearing Shimming	10-84
Pinion Bearing Race	
Installation	10-86
Oil Pump & Forward Gear	
Installation	10-87
Driveshaft & Pinion Gear	
Installation	10-87
Propeller Shaft, Assist	
Valve, & Plunger	
Installation	10-88
Exhaust Housing	
Installation	10-91
Upper Gear Housing	
Installation	10-92
Stern Drive Installation	10-95
Shift Converter Cable	
Installation	10-97
Shift Adjustment	10-99
Trim Tab Adjustment	10-102

11 INTERMEDIATE HOUSING

INTRODUCTION	11-1
TROUBLESHOOTING	11-1
SERVICING THE BOOT	11-2
Removal	11-2
Installation	11-2
BALL GEAR DRIVESHAFT	11-3
Disassembling	11-3
Assembling	11-7
INTERMEDIATE HOUSING	11-10
Removal	11-10
Installation	11-11

12 MAINTENANCE

FIBERGLASS HULLS	12-1
BELOW WATERLINE SERVICE	12-1
OFF-SEASON STORAGE	12-1
PRE-SEASON PREPARATION	12-5

APPENDIX

CONVERSIONS			
Metric	A-1	120 & 140 hp Preset Trim Model "H" and "H1"	A-81
Drill Size	A-2	120 & 140 hp SelecTrim Model "H" and "H1"	A-82
SPECIFICATIONS			
Tune-Up	A-3	175, 195, and 235 hp with fixed mount	A-83
Spark Advance Charts	A-10	175, 195, and 235 hp with SelecTrim	A-84
Carburetor Specifications	A-16	240 hp SelecTrim Model "H" and "J"	A-85
GMC In-Line Engine Specs	A-18	240 hp Preset Trim Model "D"	A-86
Kaiser V6 (GMC V6) Specs	A-20	240 hp Preset Trim Model "H" and "J"	A-87
GMC 6-Cyl In-Line Specs	A-23	240 hp SelecTrim Model "D"	A-88
GMC V8 Specs	A-24	250 hp SelecTrim	A-89
GMC V6 Specs	A-33	120 and 140 hp, also 2.5 and 3.0 Litre with fixed trim	A-90
Ford V8	A-35	120 and 140 hp also 2.5 and 3.0 Litre with SelecTrim	A-91
TORQUE VALUES	A-51	200, 230, 260 hp also 5.0 & 5.7 Litre	A-92
GEAR RATIOS		185, 200, 230 and 260 hp also 5.0 & 5.7 Litre with SelecTrim	A-93
AND OIL CAPACITIES	A-55	Tilt System 185, 200, 230 and 260 hp	A-94
WIRE IDENTIFICATION			
Second station Instrument Cable Connector	A-70	Tilt System 120 and 140 hp	A-94
Stern Drive Instrument, Cable, and Switch	A-71	Tilt System 3.8, 4.3, 5.0 and 5.7 Litre	A-95
185 & 225 hp SelecTrim Model "D"	A-72	Tilt System 2.5 & 3.0 Litre	A-95
185 & 225 hp Preset Trim Model "D"	A-73	Trim System 5.0 & 5.7 Litre	A-96
185 & 225 hp SelecTrim Models "H" & "J"	A-74	Ignition System 2.5, 3.0 3.8 and 4.3 Litre	A-96
185 & 225 hp Preset Trim Models "H" & "J"	A-75	Trim System 2.5 & 3.0 Litre	A-97
185, 200, 230, & 260 hp SelecTrim	A-76	Trim System 3.8, 4.3, 5.0 and 5.7 Litre	A-97
185, 200, 230, & 260 hp Preset Trim	A-77		
120 & 140 hp Preset Trim	A-78		
120 & 140 hp SelecTrim Model "D"	A-79		
120 & 140 hp Preset Trim Model "D"	A-80		