

### BF 225 Alarms

<u>Buzzer</u>	<u>Lights</u>		<u>MIL</u>	<u>Condition</u>	
	<u>Oil Pressure</u> <u>(Green)</u>	<u>Overheat</u> <u>(Red)</u>	<u>(Red)</u>	<u>Alternator</u> <u>(Red)</u>	
None	ON	OFF	OFF	OFF	Normal
Continuous	OFF	OFF	OFF	OFF	Low Oil Pressure
Continuous	ON	ON	OFF	OFF	Overheat
Continuous	OFF	ON	OFF	OFF	Low oil pressure & overheat
Continuous	OFF	OFF (2)	ON	OFF	Low oil pressure & abnormal PGM-FI
Continuous	OFF	OFF	OFF	ON	Low oil pressure & abnormal alternator
Continuous	OFF	OFF	OFF	OFF	Low oil pressure & water in separator filter
Continuous	ON (1)	ON	ON	OFF	Overheat & abnormal PGM-FI
Continuous	ON	ON	OFF	ON	Overheat & abnormal alternator
Continuous	ON	ON	OFF	OFF	Overheat & water in separator filter
Long Intermittent	ON (1)	OFF (2)	ON	OFF	Abnormal PGM - FI
Long Intermittent	ON	OFF	OFF	ON	Abnormal alternator
Long Intermittent	ON (1)	OFF (2)	ON	ON	Abnormal PGM - FI & abnormal alternator
Long Intermittent	ON (1)	OFF (2)	ON	OFF	Abnormal PGM-FI & water in separator filter
Long Intermittent	ON	OFF	OFF	ON	Abnormal alternator & water in separator filter
Short Intermittent	ON	OFF	OFF	OFF	Water in separator filter

NOTE 1: Light blinks when PGM-FI detects abnormal oil pressure (high pressure side)

NOTE 2: Light blinks when the PGM-FI detects engine overheat

<b>Buzzer</b>	<b>Lights</b>	<b>BF 225 Alarms</b>			<b>Condition</b>
		<b>Oil Pressure (Green)</b>	<b>Overheat (Red)</b>	<b>MIL (Red)</b>	<b>Alternator (Red)</b>
None	ON	OFF	OFF	OFF	Normal
Continuous	OFF	OFF	OFF	OFF	Low Oil Pressure
Continuous	ON	ON	OFF	OFF	Overheat
Continuous	OFF	ON	OFF	OFF	Low oil pressure & overheat
Continuous	OFF	OFF (2)	ON	OFF	Low oil pressure & abnormal PGM-FI
Continuous	OFF	OFF	OFF	ON	Low oil pressure & abnormal alternator
Continuous	OFF	OFF	OFF	OFF	Low oil pressure & water in separator filter
Continuous	ON (1)	ON	ON	OFF	Overheat & abnormal PGM-FI
Continuous	ON	ON	OFF	ON	Overheat & abnormal alternator
Continuous	ON	ON	OFF	OFF	Overheat & water in separator filter
Long Intermittent	ON (1)	OFF (2)	ON	OFF	Abnormal PGM - FI
Long Intermittent	ON	OFF	OFF	ON	Abnormal alternator
Long Intermittent	ON (1)	OFF (2)	ON	ON	Abnormal PGM - FI & abnormal alternator
Long Intermittent	ON (1)	OFF (2)	ON	OFF	Abnormal PGM-FI & water in separator filter
Long Intermittent filter	ON	OFF	OFF	ON	Abnormal alternator & water in separator
Short Intermittent	ON	OFF	OFF	OFF	Water in separator filter

NOTE 1: Light blinks when PGM-FI detects abnormal oil pressure (high pressure side)

NOTE 2: Light blinks when the PGM-FI detects engine overheat