



Operating Instructions and Safety Guide

All rights reserved. Reproduction or use of content, in any manner, without express written permission by CDI Electronics, Inc., is prohibited.

CDI P/N: 511-9766T Adjustable 8 Cyl. Spark Tester

NOTE: The 511-9766T 8 cylinder tester is for use in checking spark to the spark plugs. It is not recommended for use in doing running engine tests.

For running engine tests please use CDI Electronics single cylinder spark tester: P/N 511-9764 (neon).

1. Connect the large spring clip to engine ground, making sure to have the clear side of the tester facing you.
2. For safety purposes, it is advisable to bolt the small black wire to a good engine ground.
3. Adjust the air gap on the threaded screws in the tester to the desired gap. The recommended gap is normally between 1/4" and 3/8". **WARNING!!! DO NOT EXCEED 3/8" GAP IN EXPLOSIVE OR FLAMMABLE AREAS DUE TO THE POSSIBILITY OF ARCING BETWEEN SCREWS.**
4. Disconnect the spark plug wires from the spark plugs and connect them to the top of the threaded screws in the tester.
5. Crank the engine over and watch for firing on all cylinders.

WARNING!!! Prolonged usage of the tester can cause the starter motor to overheat. Allow sufficient time for the starter to cool off between tests.

Thank you for using CDI Electronics

12/08/2008