



INSTALLATION INSTRUCTIONS REMOTE OIL TANK PICK-UP KIT

APPLICATION

This instruction sheet is a guide for proper installation of components supplied in this kit. These components are designed for use on *Evinrude* and *Johnson* outboards. Refer to service manual and installation guides for additional assembly information.

SAFETY INFORMATION

For safety reasons, this kit should be installed by an authorized *Evinrude*®/*Johnson*® dealer. This instruction sheet is not a substitute for work experience. Additional helpful information may be found in other service literature for your engine.

This instruction sheet uses the following signal words identifying important safety messages.



DANGER



Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.



WARNING



Indicates a potentially hazardous situation which, if not avoided, CAN result in severe injury or death.



CAUTION



Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate personal injury or property damage. It also may be used to alert against unsafe practices.

IMPORTANT: Identifies information that will help prevent damage to machinery and appears next to information that controls correct assembly and operation of the product.

These safety alert signal words mean:

ATTENTION!
BECOME ALERT!
YOUR SAFETY IS INVOLVED!

Always follow common shop safety practices. If you have not had training related to common shop safety practices, you should do so to protect yourself, as well as the people around you.

It is understood that this instruction sheet may be translated into other languages. In the event of any discrepancy, the English version shall prevail.

DO NOT do any repairs until you have read the instructions and checked the pictures relating to the repairs.

Be careful, and never rush or guess a service procedure. Human error is caused by many factors: carelessness, fatigue, overload, preoccupation, unfamiliarity with the product, and drugs and alcohol use, to name a few. Damage to a boat and outboard can be fixed in a short period of time, but injury or death has a lasting effect.

When replacement parts are required, use *Evinrude*/*Johnson* Genuine Parts or parts with equivalent characteristics, including type, strength and material. Using substandard parts could result in injury or product malfunction.

Torque wrench tightening specifications must be strictly followed. Replace any locking fastener (lock-nut or patch screw) if its locking feature becomes weak. Definite resistance to turning must be felt when reusing a locking fastener. If replacement is specified or required because the locking fastener has become weak, use only authorized *Evinrude*/*Johnson* Genuine Parts.

If you use procedures or service tools that are not recommended in this instruction sheet, YOU ALONE must decide if your actions might injure people or damage the outboard.


TO THE INSTALLER: Give this sheet to the owner. Advise the owner of any special operation or maintenance information contained in the instructions.

TO THE OWNER: Save these instructions in your owner's kit. This document contains information important to the future use and maintenance of your engine.

3 5 2 8 7 0



OIL TANK – 1.8 Gallon / 3 Gallon

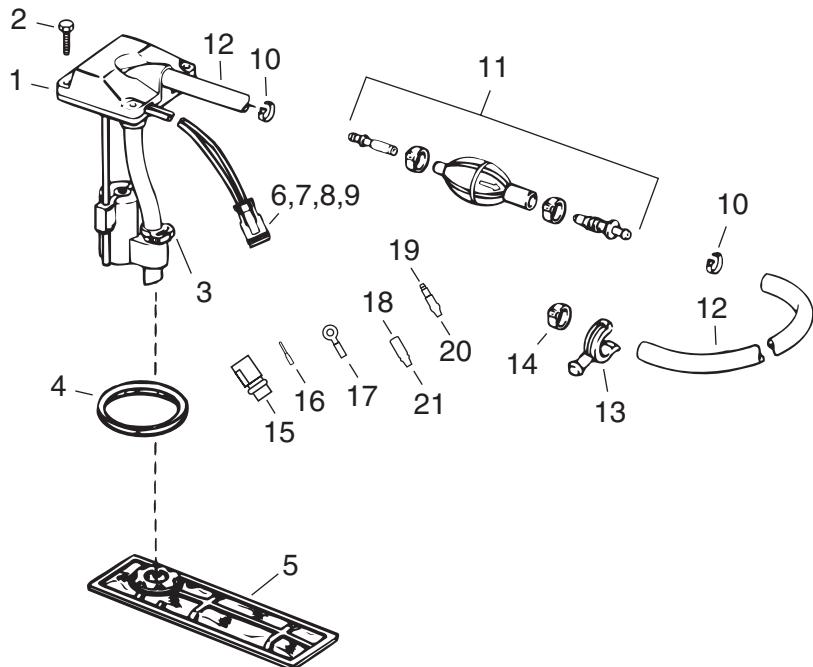

EPC3373R

Ref	P/N	Name of Part	Qty	Ref	P/N	Name of Part	Qty
1	177285	OIL TANK PICKUP KIT- 1.8 Gallon	1	11	175985	*PRIMER BULB ASSEMBLY	1
1	177286	OIL TANK PICKUP KIT- 3 Gallon	1	12	778707	*HOSE, Oil Supply	A 1
2	124485	*SCREW, Pickup Assy. to tank	4	13	329661	*HOLDER, Plug	1
3	322654	*CLAMP, Snap	1	14	347108	*CLAMP, stepless (13.8 mm)	1
4	126793	*SEAL, Pickup Assy. to tank	1	15	512746	CONNECTOR, 2-pin	B 1
5	174377	*FILTER ASSEMBLY, Oil	1	16	511469	TERMINAL, Pin	B 2
6	514680	*TERMINAL, Pin	2	17	510818	TERMINAL, Ring	B 1
7	176295	*CONNECTOR, 2-pin	1	18	512876	TERMINAL, Socket	B 1
8	514788	**SEAL, 2-socket	1	19	512947	TERMINAL, Bullet	B 1
9	127287	*LOCK WEDGE, 2-socket	1	20	513185	SLEEVE, Bullet terminal	B 1
10	126945	*CLAMP, Band, small	2	21	513186	SLEEVE, Socket	B 1

A Cut to length from bulk roll

B Use to adapt harness to older style wiring connectors




WARNING



To prevent accidental starting while servicing, disconnect battery leads from battery. Twist and remove all spark plug leads.

FORWARD

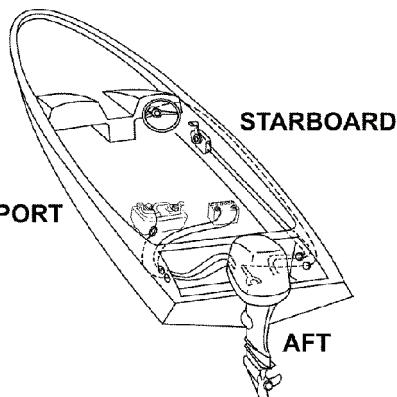

Nautical Orientation

Oil Tank Location

IMPORTANT: Consider the installation location of the oil tank carefully. The oil tank is vented to the atmosphere. To avoid serious powerhead damage, be sure the oil tank is installed in a location that does not allow constant exposure to sunlight, rain, bilge water or spray.

Select mounting location which provides:

- A solid place to mount the tank;
- A dry location that prevents exposure to rain or spraying water;
- Access for adding oil;
- Access to oil-primer bulb; and
- Interference-free hose and wire routing to outboard.

An appropriately sized battery box may be used to conceal and protect the oil tank, if desired.



000074

IMPORTANT: Be sure box includes drain holes so it does not fill with water and contaminate oil.

Oil Supply Hose Length

The oil pickup assembly is fitted with 15 ft. (4.5 m) of oil supply hose and 17 ft. (5.2 m) of sending unit wiring harness.

If necessary, the oil tank can be mounted further from the outboard than the supplied hose and harness allow. The maximum length of oil supply hose that can be fitted to the oil tank is 25 ft. (7.6 m).

IMPORTANT: Do not add hose to an existing oil supply hose.

If the oil tank requires more than 15 ft. (4.5 m) of oil supply hose:

- Oil supply hose from primer bulb to outboard must be one continuous length of 1/4 in. (6.4 mm) hose.
- Maximum length for hose is 25 ft. (7.6 m).
- Replacement hose must be designated for fuel or oil use and approved for marine use.
- Extend wiring harness with 16 gauge AWG wire.
- Protect connections with heat shrink tube.
- Maintain wire color and polarity when extending harness.

Disassembly/Assembly of Oil Tank

Remove screws and lift original pickup assembly from oil tank. Empty contents of tank. Clean tank completely.



1. Pickup assembly

005751

Install pickup assembly in tank.



005755


Align seal with housing and screw holes of housing with screw holes in tank. Secure pickup in tank with screws.



005756

3 Gallon Tank / Dual Oil Pickups

Use 2 1/2 in (6.35 cm) hole saw to drill second hole. Hole must be centered in mounting location. **Vacuum and clean all debris from tank.**

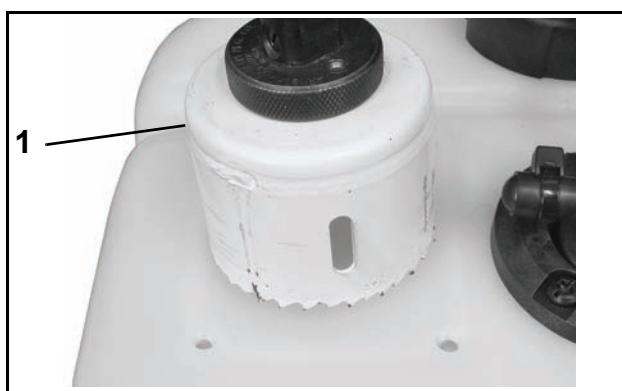

1. Hole saw

005757

1. Seal

005754

Install seals on pickups. Make sure filters are positioned properly before installing pickups in tank. See "Disassembly/Assembly of Oil Tank" on page 4.



22333

IMPORTANT: If accessory oil level sending unit is installed, position sending unit as shown above.


Oil Supply Hose Routing

IMPORTANT: Refer to appropriate service manual or the *Installation and Predelivery Guide* for additional installation and rigging information.

Oil hose installation requirements:

- Route hose from oil tank to engine. Maximum length for hose is 25 ft. (7.6 m).
- DO NOT allow hose to be pinched or kinked; or to rub against sharp surfaces.
- Carefully position hose to prevent abrasion.
- Use tie straps or clamps to secure hose in position.

Remove oil hose plug from oil supply hose. Store plug on fuel supply hose under engine cover.

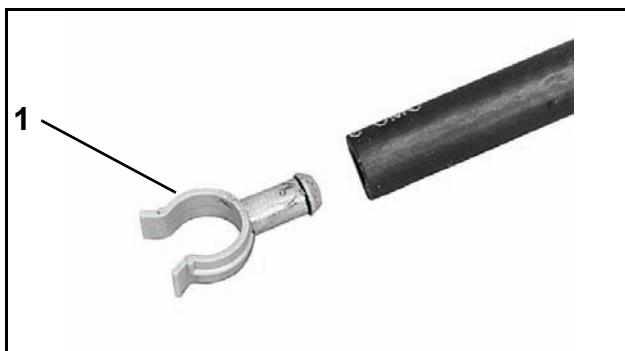


1. Plug

44710

Oil Tank Sending Unit Harness Routing

Oil tank sending unit harness installation requirements:

- Route harness from oil tank to engine.
- Route through lower engine cover grommet to 2-wire connector (tan and black wires) on engine.
- Carefully position harness in grommet and route alongside main harness.
- Use tie straps to secure harness in position.
- Apply *Electrical Grease* to seal and push connectors together until latched.

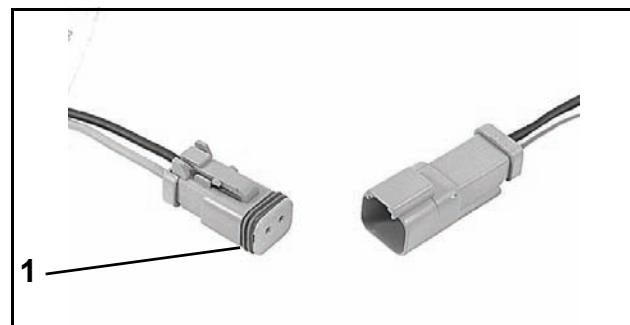

1. Seal

39971

IMPORTANT: Remove existing connector and pins and install appropriate connectors to connect oil tank harness to wiring on older outboards.

Low Oil Warning (SystemCheck instruments only)

IMPORTANT: Leave oil tank empty until low oil warning has been tested.


Turn key switch to ON. *SystemCheck* gauge should initiate a test mode, momentarily sound the warning horn, and illuminate all four indicator lights. The "LOW OIL" light should remain illuminated.

Next fill the oil tank with oil and install the oil fill cap. The "LOW OIL" light should turn off.

Oil Supply Priming


All Models

Insert the end of the oil supply hose (from the oil tank) into a suitable container. Squeeze the oil primer bulb to flow oil from the oil tank.

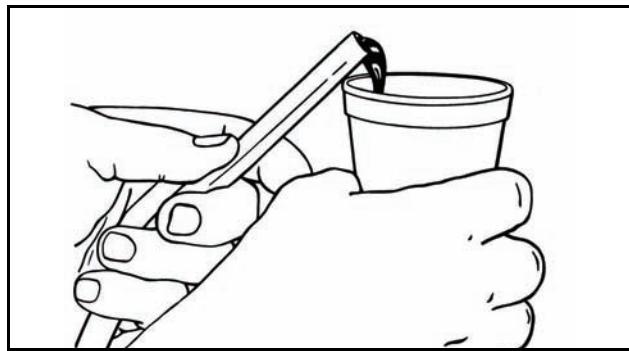

DR4422

Once oil flow is observed, connect the oil tank hose to the outboard's oil supply hose fitting and secure with stepless clamp.

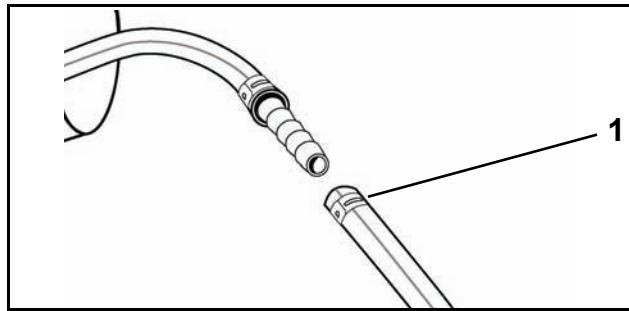

1. Clamp


000066

Evinrude E-TEC Models

Evinrude E-TEC outboards use a single oil supply hose connected between the outboard and the boat-mounted (remote) oil tank.

Follow these steps for initial outboard set-up:


- Squeeze oil primer bulb to flow oil from the hose connection, through the filter, to the oil pump. Visually inspect filter to ensure all air has been purged.
- Continue to squeeze bulb until oil flows through distribution hoses and to crankcase fittings. All air must be eliminated from hoses.
- Use *Evinrude Diagnostics* software to confirm oil programming setting (oil type) and to prime oil system. Start outboard and use prime oil function for a minimum of 90 seconds.

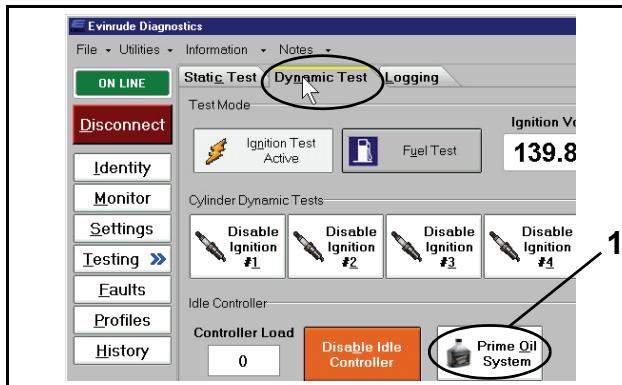

Evinrude Diagnostics, Dynamic Test screen

005137

1. Prime Oil

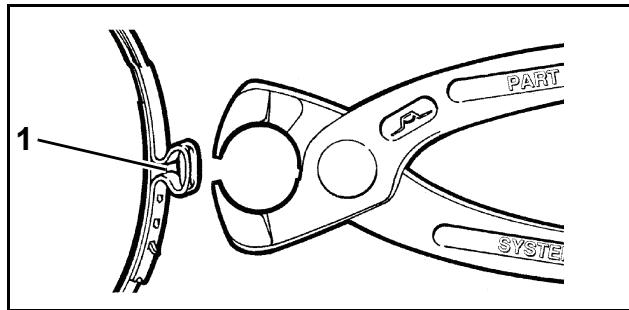


1. Clamp

000092


Direct Injection Models (models using oil return hose)

Remove protective cap from oil tank return fitting and keep with owners kit. Install oil return hose (5/16 in.) and secure with tie strap.

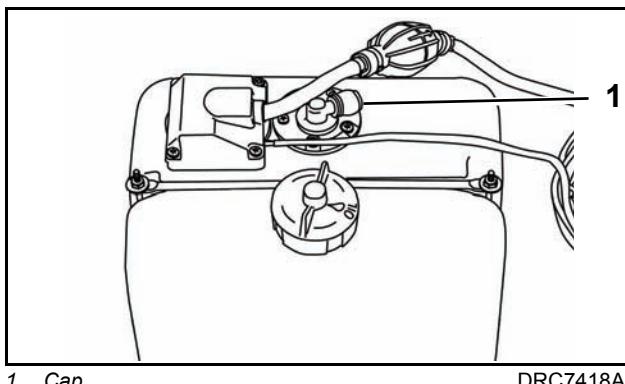

1. Cap

DRC7418A

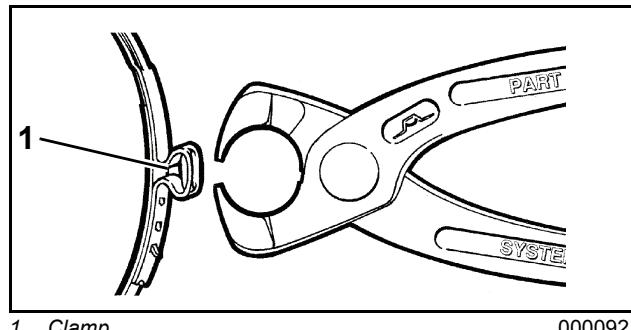

1. Clamp

000092

Carbureted Models

IMPORTANT: Connect pre-mixed oil and fuel supply (50:1) to outboard. Outboard should be equipped with **SystemCheck** gauge.

Start outboard and observe for "NO OIL" warning.


After "NO OIL" warning activates, squeeze oil primer bulb to prime oil system. Warning should stop as oil supply reaches OMS pump.

Inform operator of engine to **use fuel/oil mix** until oil delivery is confirmed. Refer to **Operator's Guide** for details.

Oil return hose installation requirements:


- Route hose from oil tank to engine.
- DO NOT allow hose to be pinched or kinked; or to rub against sharp surfaces.
- Carefully position hose(s) to prevent abrasion.
- Use tie straps or clamps to secure hose in position.

Insert oil return fitting (at engine) into a suitable container. Squeeze the oil primer bulb to flow oil from the fitting.

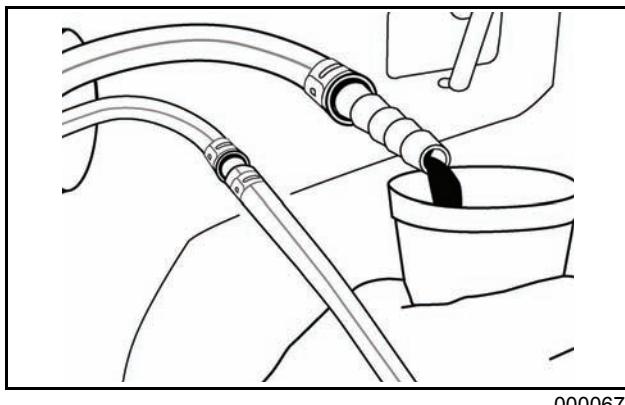

000067

Once oil flow is observed, connect the oil return hose from tank to the outboard's oil return fitting at engine and secure with stepless clamp.

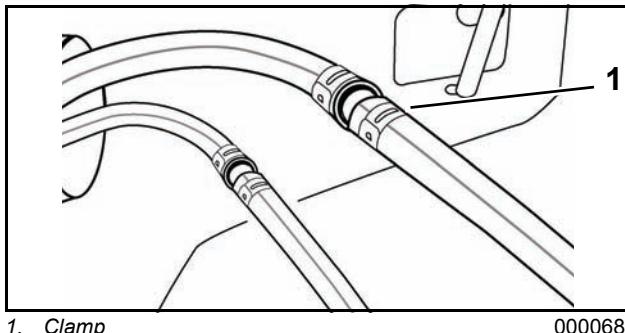

1. Clamp

000068