



EVINRUDE[®]
Johnson[®]




INSTALLATION INSTRUCTIONS

Thrust Bearing Assembly P/N 388505

SAFETY

These installation instructions contain information that can help prevent personal injury and damage to equipment. Understand the following symbols before proceeding:

 Safety Warning	Alerts you to the possibility of danger and identifies information that will help prevent injuries.
Note	Identifies information that will help prevent damage to machinery.
Important	Appears next to information that controls correct assembly and operation of the product.

TO THE OWNER

The assembly procedures outlined in this sheet should be performed by a skilled technician. If you have questions, see your DEALER. Save these instructions in your owners kit. This sheet contains information important to the future use and maintenance of your engine.

TO THE INSTALLER

Give this sheet to the owner. Advise the owner of any special operation or maintenance information contained in the instructions.

PREFACE

This thrust bearing assembly might vary from the original on early Johnson[®] and Evinrude[®] 35 models. It includes a larger needle bearing and a thinner lower thrust washer.



DP-CO3301

Follow the disassembly and assembly procedures in the in the appropriate Service Manual.

- 1 When assembling the bearing assembly, place the thin thrust washer on the pinion gear first, with the chamfered edge of inner hole is toward thrust face of pinion gear.