## INSTALLATION INSTRUCTIONS FOR BALLAST RESISTOR KIT P/N 981654

## INSTALLATION INSTRUCTIONS FOR BALLAST RESISTOR KIT P/N 981654

- 1. Install new ballast resistor in same position as old one that is being removed.
- 2. Thoroughly clean connectors to remove all dirt and rust. Connect to ballast resistor.
- 3. Completely coat connectors with Black Neoprene Dip or equivalent.

- 1. Install new ballast resistor in same position as old one that is being removed.
- 2. Thoroughly clean connectors to remove all dirt and rust. Connect to ballast resistor.
- 3. Completely coat connectors with Black Neoprene Dip or equivalent.



Printed in the United States.









Printed in the United States.
©2004 BRP US Inc. All rights reserved.
TM, ® Trademarks and registered trademarks of Bombardier Recreational Products Inc. or its affiliates.



©2004 BRP US Inc. All rights reserved.

TM, ® Trademarks and registered trademarks of Bombardier Recreational Products Inc. or its affiliates.