

ADDENDUM TO MAP INSTALLATION

PROBLEM: There have been some reports of difficulty using Diagnostic Software on computers having Windows 98® or Windows NT® operating systems. Follow this procedure instead of the map installation procedure described in the installation instructions.

1. Turn OFF the boat ignition switch.
2. Turn computer OFF and connect the Diagnostics cable between your laptop and the engine.
3. Turn ON the boat ignition switch.
4. Insert the disk into the 3½" floppy drive.
5. Turn ON your computer.
6. The computer will load an operating system from the floppy disk and will display the DOS prompt (A:\ >) on a black screen.
7. Type "go" and press ENTER key.
8. Carefully follow the on-screen prompts to install the new map.
9. When the map download procedure is complete, you will once again see the DOS prompt (A:\ >).
10. If you are installing an upgrade kit, continue with the instructions included with that kit to complete the upgrade.
11. **Note** It is very important to check the ignition timing whenever a new map is installed in an engine. Use Diagnostic Software to verify timing.



EVINRUDE®
Johnson®

