



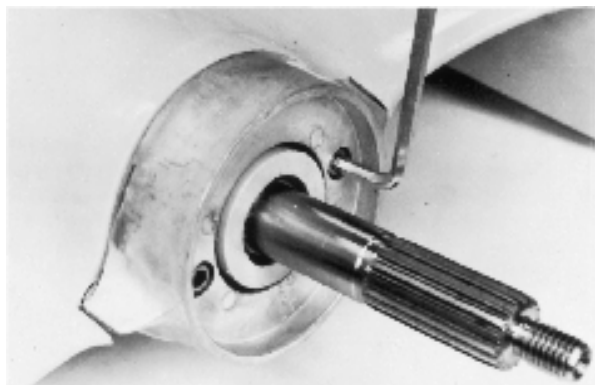


3. Remove the Allen-head bolts holding the zinc ring and remove it.



5b. Sterndrive model 290: Remove the cover over the shift mechanism and disconnect the shift cable from the shift plate and remove the swivel. Remove the screws holding the locking plate, then push the locking plate down.

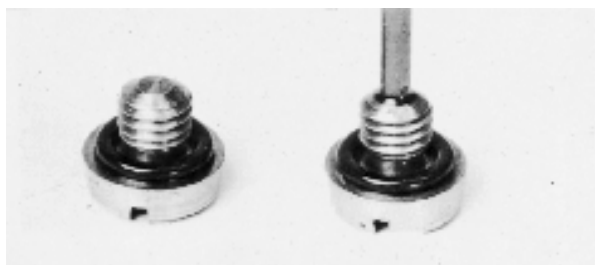


4. Remove the oil drain plug and drain off the oil. Also remove the oil dipstick to facilitate the oil drainage. Replace the O-ring on the drain plug and on the oil dipstick.

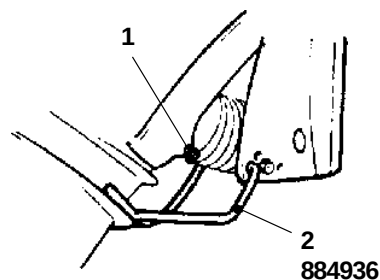

6a. Sterndrive models 280 and 285:

⚠ IMPORTANT! Carefully check the rubber bellows for possible damage and also check that the hose clamps are properly tightened.

NOTE! The universal joint bellows and its hose clamps should be replaced every other year. Contact an authorized service workshop and let them do the checking and replacing of the rubber bellows.

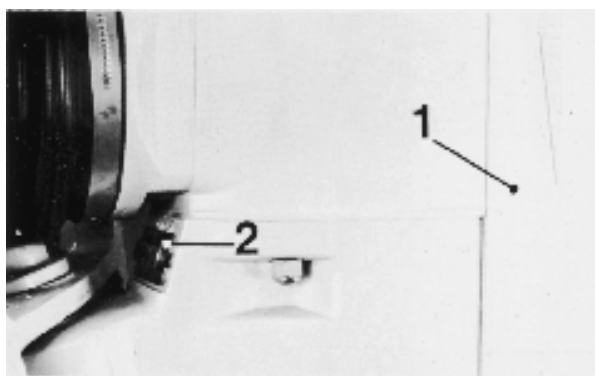

5a. Sterndrive models 280 and 285: Remove the cover (1) over the shift mechanism and disconnect the shift cable from the shift plate and remove the swivel. Then remove the shift cable locking plate (2).