



A - B \geq 12", per Crusader
Installation manual (L510023-07)

A -- FROM WATERLINE TO REFERENCE POINT

B -- FROM HIGHEST POINT ON EXHAUST ELBOW TO SAME REFERENCE POINT