

4. FLUSH VALVE

DISASSEMBLY/REASSEMBLY

- 1) Remove the engine cover (P. 4-1).
- 2) Remove the engine under cover (P. 4-5).
- 3) Remove the bolts and the flush valve.
- 4) Install a new O-ring and the flush valve.

