


## Fuses

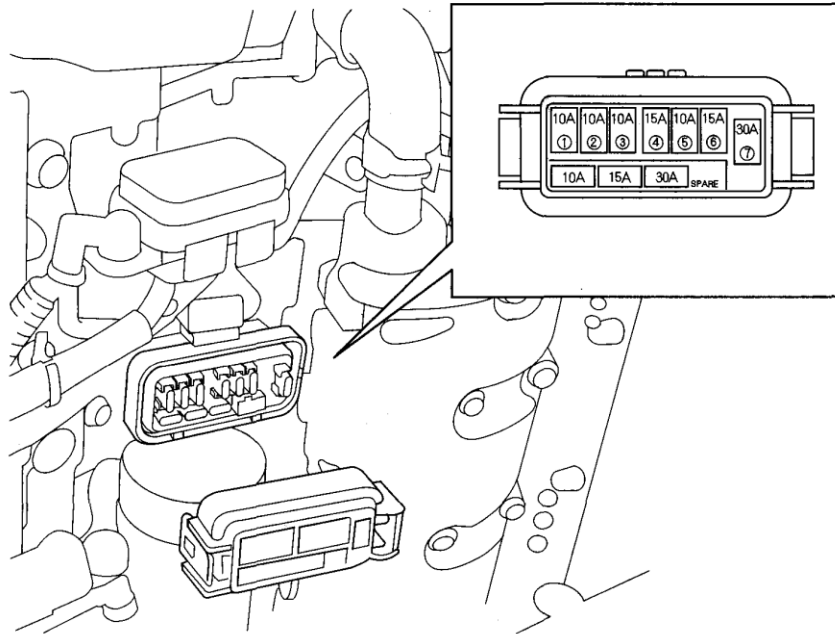

### • FUSE to COMPONENTS INDEX

Fuse No.	Amps.	Component(s) or Circuit(s) Protected
1* <sup>1</sup>	10 A	ECM (STS)
2	10 A	Fuel pump
3	10 A	Alternator (output terminal), Engine oil pressure light, Overheat light, Power tilt relay, PGM-FI main relay, Techometer, Trim meter, Warning buzzer
4* <sup>1</sup>	15 A	ECM (power supply), Injector
5* <sup>1</sup>	10 A	Alternator, HO2S (heated oxygen sensor), Fuel line cut-off solenoid valve, Intake air bypass (IAB) control solenoid valve, VTEC solenoid valve, Service check connector
6* <sup>1</sup>	15 A	Ignition coils
7	30 A	ECM (power supply), Injector
		Alternator, HO2S (heated oxygen sensor), Fuel line cut-off solenoid valve, Intake air bypass (IAB) control solenoid valve, VTEC solenoid valve, Service check connector
		Ignition coils
		Starter motor

\*1: Via PGM-FI main relay