

3. RELIEF VALVE

DISASSEMBLY/REASSEMBLY

- 1) Remove the engine cover (P. 4-1).
- 2) Disconnect the water outlet tube from the right relief valve.
- 3) Remove the bolts and the relief valve.
- 4) Always use a new O-ring and gaskets and install the relief valve.

