

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-13
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

MAINTENANCE & TUNE-UP

GENERAL INFORMATION (WHAT EVERYONE SHOULD KNOW ABOUT MAINTENANCE)	2-2
LUBRICATION SERVICE	2-4
ENGINE MAINTENANCE	2-9
BOAT MAINTENANCE	2-23
TUNE-UP	2-26
TIMING & SYNCHRONIZATION - 1 & 2 CYL ENGINES	2-37
TIMING & SYNCHRONIZATION - 3 CYL & V4 ENGINES	2-41
STORAGE (WHAT TO DO BEFORE & AFTER)	2-52
CLEARING A SUBMERGED MOTOR	2-55
SPECIFICATIONS	2-56

3

FUEL SYSTEM

FUEL & COMBUSTION BASICS	3-2
FUEL TANK & LINES - PRESSURE TYPE (1958-59)	3-8
FUEL TANK & LINES - NON-PRESSURE TYPE (1959 & LATER)	3-12
CARBURETED FUEL SYSTEMS	3-16
CARBURETORS - 1 & 2 CYLINDER MOTORS	3-18
CARBURETORS - 3 CYLINDER & V4 MOTORS	3-41
FUEL SYSTEM COMPONENTS	3-61
TROUBLESHOOTING	

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS - GENERAL INFORMATION	4-8
FLYWHEEL MAGNETO IGNITION SYSTEMS	4-13
DISTRIBUTOR MAGNETO IGNITION SYSTEMS	4-21
DISTRIBUTOR BATTERY IGNITION SYSTEMS	4-32
CD IGNITION - W/SENSOR	4-41
CD IGNITION - W/BREAKER POINTS	4-53
CD IGNITION - W/TIMER BASE	4-62
CHARGING SYSTEM - GENERATOR	4-72
CHARGING SYSTEM - ALTERNATOR	4-77
BATTERY	4-86
STARTING SYSTEM	4-88
ELECTRICAL ACCESSORIES	4-102
SPECIFICATIONS	4-105
WIRING DIAGRAMS	4-108

5

COOLING SYSTEM

COOLING SYSTEM	5-2
----------------	-----

CONTENTS

POWERHEAD POWERHEAD OVERHAUL POWERHEAD BREAK-IN EXPLODED VIEWS SPECIFICATIONS	6-2 6-4 6-41 6-41	POWERHEAD	6
LOWER UNIT - GEARCASE BASICS TYPE I - NON-SHIFTING LOWER UNIT TYPE II - MECHANICAL SHIFT LOWER UNIT, SPLIT GEARCASE (5-25 HP) TYPE III - MECHANICAL SHIFT LOWER UNIT, SPLIT GEARCASE (28-40 HP) TYPE IV - MANUAL SHIFT LOWER UNIT, SPLIT LOWER UNIT TYPE V - MANUAL SHIFT LOWER UNIT, SINGLE ENCLOSED HOUSING TYPE VI - ELECTROMATIC LOWER UNIT (ALL EXC. 100 HP) TYPE VII - ELECTROMATIC LOWER UNIT (100 HP) TYPE VIII - ELECTRIC SHIFT LOWER UNITS, 2 SOLENOIDS TYPE IX - MECHANICAL SHIFT LOWER UNIT, SLIDING CLUTCH DOG SPECIFICATIONS	7-2 7-4 7-8 7-20 7-27 7-35 7-44 7-55 7-64 7-80 7-91	LOWER UNIT	7
TRIM/TILT SYSTEMS	8-2	TRIM & TILT	8
REMOTE CONTROLS REMOTE CONTROL CABLES	9-2 9-25	REMOTE CONTROLS	9
HAND REWIND STARTER TYPE I STARTER - CYLINDER W/PINION GEAR (5-6 HP) TYPE II STARTER - CYLINDER W/PINION GEAR (9.5 HP) TYPE III STARTER - COIL SPRING W/SWING ARM VERTICAL MOUNT TYPE IV STARTER - MOUNTED ATOP FLYWHEEL W/NO RETURN SPRINGS TYPE V STARTER - MOUNTED ATOP FLYWHEEL W/RETURN SPRINGS TYPE VI STARTER - MOUNTED ATOP FLYWHEEL WITH 1 OR 2 NYLON PAWLS TYPE VII STARTER - MOUNTED ATOP FLYWHEEL W/ADJUSTABLE PAWL SPECIFICATIONS	10-2 10-4 10-8 10-12 10-16 10-21 10-22 10-27 10-32	HAND REWIND STARTER	10
MASTER INDEX	10-35	MASTER INDEX	

<p>ALTERNATOR 4-77 DESCRIPTION 4-77 DIODE 4-86 OPERATION 4-77 STATOR 4-96 TROUBLESHOOTING 4-77</p> <p>ANODES 2-21 INSPECTION 2-22 SERVICING 2-22</p> <p>AUTOLITE STARTERS 4-91 CLEANING & INSPECTION 4-93 DISASSEMBLY & ASSEMBLY 4-92 REMOVAL & INSTALLATION 4-91 TESTING 4-93</p> <p>BASIC ELECTRICAL THEORY 4-2 HOW DOES ELECTRICITY WORK: THE WATER ANALOGY 4-2 OHM'S LAW 4-2 WHERE TO START 4-2</p> <p>BASIC OPERATING PRINCIPLES 1-13 COMBUSTION 1-16 UNDERSTANDING ENGINE OPERATION 1-13 2-STROKE MOTORS 1-14 4-STROKE MOTORS 1-16</p> <p>BATTERY CONSTRUCTION 4-87 DUAL BATTERY 4-88 JUMPER CABLES 4-87 LOCATION 4-87 MAINTENANCE 2-23 MARINE BATTERIES 4-86 RATINGS 4-87 SERVICE 4-87 STORAGE 2-25, 4-88 TESTING 2-24</p> <p>BEFORE/AFTER EACH USE 2-3 VISUALLY INSPECTING THE BOAT & MOTOR 2-3</p> <p>BOAT MAINTENANCE 2-23 BATTERY 2-23 FIBERGLASS HULL 2-25</p> <p>BOATING EQUIPMENT (NOT REQUIRED, BUT RECOMMENDED) ... 1-10 ANCHORS 1-10 BAILING DEVICES 1-10 COMPASS 1-11 FIRST AID KIT 1-10 OAR/PADDLE 1-10 TOOLS & SPARE PARTS 1-12 VHF-FM RADIO 1-10</p> <p>BOATING SAFETY 1-4 COURTESY MARINE EXAMINATIONS 1-10 REGULATIONS FOR YOUR BOAT 1-4 REQUIRED SAFETY EQUIPMENT 1-6</p> <p>BOTTOM SEAL 6-15 INSPECTION 6-17 REMOVAL & INSTALLATION 6-15 1 & 2 CYL W/SEAL MOUNTED ON THE DRIVESHAFT 6-15 1 & 2 CYL W/SEAL MOUNTED ON THE CRANKSHAFT 6-15 1 & 2 CYL & ALL 3 CYL ENGINES W/SEAL IN A CAP 6-16 1958-68 V4 W/SEAL MOUNTED ON THE CRANKSHAFT 6-16 1969 & LATER V4 W/SEAL INSTALLED IN BEARING CAP 6-17</p> <p>BREAKING IN A POWERHEAD 6-41</p> <p>BYPASS COVER 6-11 REMOVAL & INSTALLATION 6-11</p> <p>CARBURETED FUEL SYSTEMS 3-16 DESCRIPTION & OPERATION 3-16 GENERAL INFORMATION 3-16</p> <p>CARBURETOR APPLICATIONS 1 & 2 CYLINDER MOTORS 3-18 3 CYLINDER & V4 MOTORS 3-41</p> <p>CARBURETORS - 1 & 2 CYLINDER MOTORS 3-18 APPLICATIONS 3-18</p>	<p>TYPE I 3-19 DISASSEMBLY & ASSEMBLY 3-22 REMOVAL, INSTALLATION & ADJUSTMENT 3-20</p> <p>TYPE II 3-26 DISASSEMBLY & ASSEMBLY 3-29 REMOVAL, INSTALLATION & ADJUSTMENT 3-26</p> <p>TYPE III 3-33 DISASSEMBLY & ASSEMBLY 3-35 REMOVAL & INSTALLATION 3-34</p> <p>TYPE IV 3-37 DISASSEMBLY & ASSEMBLY 3-39 REMOVAL, INSTALLATION & ADJUSTMENT 3-37</p> <p>CARBURETORS - 3 CYLINDER & V4 MOTORS 3-41 APPLICATIONS 3-41 GENERAL INFORMATION 3-41</p> <p>TYPE I 3-41 ASSEMBLY 3-47 CLEANING & INSPECTION 3-47 DISASSEMBLY 3-44 REMOVAL & INSTALLATION 3-43</p> <p>TYPE II 3-48 ASSEMBLY 3-52 CLEANING & INSPECTION 3-52 DISASSEMBLY 3-50 REMOVAL & INSTALLATION 3-48</p> <p>TYPE III 3-54 CLEANING & INSPECTION 3-57 DISASSEMBLY & ASSEMBLY 3-56 REMOVAL & INSTALLATION 3-54</p> <p>TYPE IV 3-57 CLEANING & INSPECTION 3-61 DISASSEMBLY & ASSEMBLY 3-60 REMOVAL & INSTALLATION 3-57</p> <p>CD IGNITION - W/BREAKER POINTS 4-53 DESCRIPTION & OPERATION 4-53 IDENTIFICATION 4-53 SERVICE 4-60 ASSEMBLY 4-62 CLEANING & INSPECTION 4-61 DISASSEMBLY 4-60 TROUBLESHOOTING - 1968-69 55 HP & 1968 65/85 HP ENGINES 4-53 TROUBLESHOOTING - 1969-72 85 HP & 1971 100 HP ENGINES 4-56 TROUBLESHOOTING - 1970-71 60 HP ENGINES 4-58</p> <p>CD IGNITION, W/SENSOR 4-41 DESCRIPTION & OPERATION 4-41 IDENTIFICATION 4-41 SERVICE - 1967 100 HP MODELS 4-49 POWER PACK 4-50 ROTOR 4-49 SENSOR 4-49 SERVICE - ALL OTHER MODELS 4-50 ASSEMBLY 4-52 CLEANING & INSPECTION 4-52 DISASSEMBLY 4-50 VACUUM SWITCH 4-50 TROUBLESHOOTING - GENERAL 4-42 TROUBLESHOOTING - 1967-68 100 HP 4-42 TROUBLESHOOTING - 1969-70 115 Hp 4-45 TROUBLESHOOTING - 1972 100 HP & 1971-72 125 HP 4-47</p> <p>CD IGNITION - W/TIMER BASE 4-62 DESCRIPTION & OPERATION 4-62 IDENTIFICATION 4-62 POWER PACK 4-71 REPLACEMENT 4-71 STATOR & CHARGE COIL 4-70 REPLACEMENT 4-70 TIMER BASE & SENSOR ASSEMBLY 4-71 REPLACEMENT 4-71 TIMING 4-71 CHECK & ADJUSTMENT 4-71 TROUBLESHOOTING - 1971-72 50 HP 4-64 TROUBLESHOOTING - 1972 65 HP 4-67</p> <p>CENTERING PIN 6-17 REMOVAL 6-17</p>
--	---

10-36 MASTER INDEX

CHARGING SYSTEM - ALTERNATOR	4-77	ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON) . . .	9-7
DESCRIPTION	4-77	ELECTRIC PUSHBUTTON GEAR BOXES (EVINRUDE)	9-11
DIODE	4-86	GENERATOR	4-72
OPERATION	4-77	FLYWHEEL MAGNETO IGNITION	4-13
STATOR	4-96	LOWER UNIT	
TROUBLESHOOTING	4-77	TYPE I - NON-SHIFTING	7-4
CHARGING SYSTEM - GENERATOR	4-72	TYPE III - MECHANICAL SHIFT, SPLIT GEARCASE (28-40 HP) . . .	7-20
DESCRIPTION	4-72	TYPE VI - ELECTROMATIC (ALL EXC. 100 HP)	7-44
GENERATOR	4-74	TYPE VIII - ELECTRIC SHIFT, 2 SOLENOIDS	7-64
TROUBLESHOOTING	4-72	TYPE IX - MECHANICAL SHIFT, SLIDING CLUTCH DOG	7-80
VOLTAGE REGULATOR	4-74	SINGLE LEVER HYDRO-ELECTRIC REMOTE CONTROL SHIFT BOX . . .	9-20
CHEMICALS	1-17	SINGLE LEVER REMOTE CONTROL SHIFT BOX	9-16
CLEANERS	1-18	STARTING SYSTEM	4-88
LUBRICANTS & PENETRANTS	1-17	TRIM/TILT	8-2
SEALANTS	1-18	WATER CHOKE	3-63
TYPES OF CHEMICALS	1-17		
CHOKE CIRCUIT	4-105	DIODE	4-86
CLEARING A SUBMERGED MOTOR	2-55	REPLACEMENT	4-86
COMPASS	1-11	DISTRIBUTOR BATTERY IGNITION SYSTEMS	4-32
INSTALLATION	1-11	DESCRIPTION & OPERATION	4-32
PRECAUTIONS	1-12	IDENTIFICATION	4-32
SELECTION	1-11	SERVICE	4-34
COMPRESSION CHECK	2-28	BELT REPLACEMENT & TIMING	4-39
CONNECTING RODS, PISTONS & RINGS	6-21	CLEANING & INSPECTION	4-36
CLEANING, INSPECTION & SERVICE	6-28	INSTALLATION & ASSEMBLY	4-36
CONNECTING ROD	6-29	REMOVAL & DISASSEMBLY	4-34
OVERSIZE PISTONS & RINGS	6-28	TROUBLESHOOTING	4-34
PISTON & RING	6-28	DISTRIBUTOR MAGNETO IGNITION SYSTEMS	4-21
DISASSEMBLY & ASSEMBLY	6-25	DESCRIPTION & OPERATION	4-21
REMOVAL & INSTALLATION	6-21	IDENTIFICATION	4-21
COOLING SYSTEM		SERVICE	4-23
DESCRIPTION & OPERATION	5-2	CHECKS & ADJUSTMENT	4-31
FLUSHING THE SYSTEM	2-9	CLEANING & INSPECTION	4-26
GENERAL INFORMATION	5-2	DISTRIBUTOR BELT	4-30
MAINTENANCE	2-36	INSTALLATION & ASSEMBLY	4-27
THERMOSTAT (& PRESSURE RELIEF VALVE)	5-5	REMOVAL & DISASSEMBLY	4-23
TROUBLESHOOTING	5-3	TROUBLESHOOTING	4-23
WATER PUMP	5-6	DE-CARBONING THE PISTONS	2-27
WATER PUMP CHECK	2-36	DOUBLE LEVER SHIFT BOX	9-3
CRANKCASE COVER	6-19	DISASSEMBLY & ASSEMBLY	9-4
REMOVAL & INSTALLATION	6-19	EARLY MODELS	9-4
CRANKCASE SIDE BOLTS	6-17	LATER MODELS	9-5
REMOVAL & INSTALLATION	6-17	TROUBLESHOOTING	9-3
CRANKSHAFT & BEARING	6-30	ELECTRIC CHOKE	3-63
ASSEMBLY & INSTALLATION - 1 & 2 CYL	6-32	REMOVAL & INSTALLATION	3-63
UNITS W/ALL BABBIT MAIN & ROD BEARINGS	6-35	ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON) . . .	9-7
UNITS W/ALL NEEDLE MAIN & ROD BEARINGS	6-33	DISASSEMBLY & ASSEMBLY	9-10
UNITS W/BABBIT OR BABBIT & NEEDLE BEARINGS	6-34	REMOTE CONTROL CABLE	
ASSEMBLY & INSTALLATION - 3 CYL & V4	6-36	INSTALLATION IN THE BOAT	9-11
CLEANING & INSPECTION	6-39	STARTER LOCK-OUT SWITCH	
REMOVAL & DISASSEMBLY	6-30	ADJUSTMENT	9-11
1 & 2 CYL	6-30	TROUBLESHOOTING	9-7
3 CYL & V4	6-30	AMP DRAW TEST	9-7
CYLINDER BLOCK	6-40	CRANKING SYSTEM INOPERATIVE	9-9
HONING	6-40	DIFFICULT SHIFT OPERATION	9-7
SERVICE	6-40	SHIFT COIL TEST	9-8
CYLINDER HEAD	6-4	SHIFT SOLENOID TEST	9-8
REMOVAL & SERVICE	6-4	TESTING THE SHIFT SWITCH - FORWARD	9-8
DELCO-REMY STARTERS	4-95	TESTING THE SHIFT SWITCH - NEUTRAL	9-9
CLEANING & INSPECTION	4-96	TESTING THE SHIFT SWITCH - REVERSE	9-9
DISASSEMBLY & ASSEMBLY	4-95	ELECTRIC PUSHBUTTON GEAR BOXES (EVINRUDE)	9-11
REMOVAL & INSTALLATION	4-95	DESCRIPTION & OPERATION	9-11
TESTING	4-96	DISASSEMBLY & ASSEMBLY	9-14
DESCRIPTION & OPERATION		TROUBLESHOOTING	9-11
ALTERNATOR	4-77	AMP DRAW TEST	9-12
CARBURETOR	3-16	DIFFICULT SHIFT OPERATION	9-12
CD IGNITION, W/POINTS	4-53	SHIFT COIL TEST	9-12
CD IGNITION, W/SENSOR	4-41	SHIFT SOLENOID TEST	9-12
CD IGNITION, W/TIMER BASE	4-62	TESTING THE SHIFT SWITCH - FORWARD	9-12
COOLING SYSTEM	5-2	TESTING THE SHIFT SWITCH - REVERSE	9-12
DISTRIBUTOR MAGNETO IGNITION	4-21	CRANKING SYSTEM INOPERATIVE	9-13
DISTRIBUTOR BATTERY IGNITION	4-32	TESTING THE SHIFT SWITCH - NEUTRAL	9-13
DOUBLE LEVER SHIFT BOX	9-3		

ELECTRIC STARTER MOTOR PINION	2-4	OCTANE RATING	
LUBRICATION	2-5	VAPOR PRESSURE	3-2
RECOMMENDED LUBRICANT	2-4	FUEL FILTER	2-14
ELECTRICAL ACCESSORIES	4-102	FUEL PUMP FILTERS	2-15
CHOKE CIRCUIT	4-105	INLINE FILTERS	2-15
FUEL GAUGE	4-103	SEDIMENT BOWL FILTERS	2-16
GENERAL INFORMATION	4-102	FUEL GAUGE	4-103
HORNS	4-104	HOOK-UP	4-103
TACHOMETER	4-104	TROUBLESHOOTING	4-103
TEMPERATURE GAUGE AND/OR WARNING LIGHT	4-102	FUEL LINE SERVICE	
ELECTRICAL COMPONENTS	4-2	NON-PRESSURE TYPE	3-14
LOAD	4-4	PRESSURE TYPE	3-12
GROUND	4-3	FUEL PRIMER	3-70
POWER SOURCE	4-2	FUEL PUMP	3-66
PROTECTIVE DEVICES	4-3	OVERHAUL	3-70
SWITCHES & RELAYS	4-4	REMOVAL, DISASSEMBLY & INSTALLATION - REBUILDABLE STYLE	3-67
WIRING & HARNESSES	4-4	REMOVAL & INSTALLATION - DIAPHRAGM-DISPLACEMENT TYPE	3-69
ELECTRICAL TESTING	4-6	TESTING	3-66
OPEN CIRCUITS	4-7	TROUBLESHOOTING	3-66
RESISTANCE	4-6	FUEL SYSTEM BASICS	3-2
SHORT CIRCUITS	4-7	FUEL	3-2
VOLTAGE	4-6	SERVICE CAUTIONS	3-3
VOLTAGE DROP	4-6	SYSTEM PRESSURIZATION	3-3
ELECTRONIC TOOLS	1-23	TROUBLESHOOTING	3-3
BATTERY CHARGERS	1-23	FUEL SYSTEM COMPONENTS	3-61
BATTERY TESTERS	1-23	ELECTRIC CHOKE	3-63
GAUGES	1-25	FUEL PUMP	3-66
MULTI-METERS (DVOMS)	1-24	HEAT/ELECTRIC CHOKE	3-61
ENGINE COVER LATCHES	2-5	MANUAL FUEL PRIMER	3-70
LUBRICATION	2-5	WATER CHOKE	3-63
RECOMMENDED LUBRICANT	2-5	FUEL SYSTEM MAINTENANCE	2-34
ENGINE COVERS	2-9	CARBURETOR ADJUSTMENTS	2-34
REMOVAL & INSTALLATION	2-9	FUEL & FUEL TANKS	2-36
ENGINE IDENTIFICATION	2-2	FUEL PUMPS	2-36
ENGINE SERIAL NUMBERS	2-2	FUEL SYSTEM PRESSURIZATION	3-3
ENGINE MAINTENANCE	2-9	PRESSURIZING - CHECKING FOR LEAKS	3-3
ANODES (ZINCS)	2-21	FUEL SYSTEM SERVICE CAUTIONS	3-3
COOLING SYSTEM	2-9	FUEL TANK	3-12
ENGINE COVERS	2-9	SERVICE	3-13
FUEL FILTER	2-14	FUEL TANK & LINES - NON-PRESSURE TYPE (1959 & LATER)	3-12
LOWER UNIT (GEARCASE) OIL	2-12	FUEL LINES & FITTINGS	3-14
PROPELLER	2-16	FUEL TANK	3-12
2-STROKE ENGINE OIL	2-11	GENERAL INFORMATION	3-12
EXHAUST COVER	6-12	FUEL TANK & LINES - PRESSURE TYPE (1958-59)	3-8
CLEANING	6-13	FUEL LINE SERVICE	3-12
REMOVAL & INSTALLATION	6-12	PRESSURIZED FUEL SYSTEM	3-8
FASTENERS, MEASUREMENTS & CONVERSIONS	1-27	FUEL SYSTEM TROUBLESHOOTING	3-3
BOLTS, NUTS & OTHER THREADED RETAINERS	1-27	BY SYMPTOM	3-8
STANDARD & METRIC MEASUREMENTS	1-27	CHOKE PROBLEMS	3-5
TORQUE	1-27	DRAIN & PRIMER TESTING	3-7
FIBERGLASS HULL	2-25	ENGINE SURGE	3-7
INSPECTION & CARE	2-25	EXCESSIVE FUEL CONSUMPTION	3-7
FLYWHEEL MAGNETO IGNITION SYSTEMS	4-13	FUEL LINE TESTING	3-6
ARMATURE PLATE	4-18	FUEL PROBLEMS	3-3
CLEANING & INSPECTION	4-18	FUEL PUMP TESTING	3-5
REMOVAL & INSTALLATION	4-18	ROUGH ENGINE IDLE	3-6
BREAKER POINTS/CONDENSER	4-16	GEARCASE OIL	2-12
ADJUSTMENT	4-17	CHECKING OIL LEVEL	2-12
SERVICE	4-16	DRAINING & FILLING	2-13
COIL	4-19	OIL RECOMMENDATIONS	2-12
REMOVAL & INSTALLATION	4-19	GENERAL INFORMATION	
DESCRIPTION & OPERATION	4-13	(WHAT EVERYONE SHOULD KNOW ABOUT MAINTENANCE)	2-2
FLYWHEEL	4-14	BEFORE/AFTER EACH USE	2-3
CLEANING & INSPECTION	4-15	ENGINE IDENTIFICATION	2-2
REMOVAL & INSTALLATION	4-14	MAINTENANCE COVERAGE	2-2
IDENTIFICATION	4-13	MAINTENANCE EQUALS SAFETY	2-2
TOP SEAL	4-19	OUTBOARDS ON SAIL BOATS	2-2
CLEANING & INSPECTION	4-19	GENERATOR	4-72
REPLACEMENT	4-19	ARMATURE TESTING	4-75
WICK	4-21	ASSEMBLY & INSTALLATION	4-77
REPLACEMENT	4-21	CLEANING & INSPECTION	4-76
FUEL	3-2	DESCRIPTION	4-72
ALCOHOL-BLENDED FUELS	3-2		
GENERAL	3-2		
HIGH ALTITUDE OPERATION	3-3		

10-38 MASTER INDEX

GENERATOR	4-74	TYPE IX - MECHANICAL SHIFT LOWER UNIT, SLIDING CLUTCH DOG	7-80
REMOVAL & DISASSEMBLY	4-74	LOWER UNIT - GEARCASE BASICS	7-2
TROUBLESHOOTING	4-72	GENERAL INFORMATION	7-2
VOLTAGE REGULATOR	4-74	WATER PUMP	7-2
HAND REWIND STARTER	10-2	MAINTENANCE & SERVICE	7-3
EMERGENCY STARTING	10-3	LOWER UNIT (GEARCASE) OIL	7-3
GENERAL INFORMATION	10-2	PROPELLER	7-3
DESIGN 1	10-2	LUBRICATION SERVICE	2-4
DESIGN 2	10-3	GENERAL INFORMATION	2-4
DESIGN 3	10-3	ELECTRIC STARTER MOTOR PINION	2-4
OPERATION	10-3	ENGINE COVER LATCHES	2-5
TYPE I - CYLINDER W/PINION GEAR (5-6 HP)	10-4	LINKAGE, CABLES & SHAFTS	2-7
TYPE II - CYLINDER W/PINION GEAR (9.5 HP)	10-8	POWER STEERING FLUID RESERVOIR	2-6
TYPE III - COIL SPRING W/ SWING ARM VERTICAL MOUNT	10-12	POWER TRIM/TILT RESERVOIR	2-6
TYPE IV - MOUNTED ATOP FLYWHEEL W/NO RETURN SPRINGS	10-6	STEERING ARM	2-7
TYPE V - MOUNTED ATOP FLYWHEEL W/RETURN SPRINGS	10-21	SWIVEL BRACKET & TILT SUPPORT	2-8
TYPE VI - MOUNTED ATOP FLYWHEEL WITH 1 OR 2 NYLON PAWLS	10-22	TILT TUBE ASSEMBLY	2-8
TYPE VII - MOUNTED ATOP FLYWHEEL W/ADJUSTABLE PAWL	10-27	MAIN BEARING BOLTS	6-17
HAND TOOLS	1-19	REMOVAL & INSTALLATION	6-17
BREAKER BARS	1-20	MANUAL FUEL PRIMER	3-70
HAMMERS	1-22	ASSEMBLY & INSTALLATION	3-72
PLIERS	1-22	CLEANING & INSPECTION	3-71
SCREWDRIVERS	1-22	GENERAL INFORMATION	3-70
SOCKET SETS	1-19	REMOVAL & DISASSEMBLY	3-71
TORQUE WRENCHES	1-19	TESTING	3-70
WRENCHES	1-20	MEASURING TOOLS	1-25
HEAT/ELECTRIC CHOKE	3-61	DEPTH GAUGES	1-26
REMOVAL & INSTALLATION	3-61	DIAL INDICATORS	1-26
HORNS	4-104	MICROMETERS & CALIPERS	1-25
HOW TO USE THIS MANUAL	1-2	TELESCOPING GAUGES	1-26
AVOIDING COMMON MISTAKES	1-3	POWER STEERING FLUID RESERVOIR	2-6
AVOIDING TROUBLE	1-2	FLUID LEVEL/CONDITION	2-6
CAN YOU DO IT?	1-2	FLUID & FILTER	2-6
DIRECTIONS & LOCATIONS	1-2	RECOMMENDED LUBRICANT	2-6
MAINTENANCE OR REPAIR?	1-2	POWER TRIM/TILT RESERVOIR	2-6
PROFESSIONAL HELP	1-3	CHECKING FLUID LEVEL	2-6, 8-2
PURCHASING PARTS	1-3	RECOMMENDED LUBRICANT	2-6, 8-2
WHERE TO BEGIN	1-2	POWERHEAD	6-2
IGNITION & ELECTRICAL SYSTEM MAINTENANCE	2-34	INTRODUCTION	6-2
INSPECTION	2-34	REBUILDING TIPS	6-4
IGNITION SYSTEMS		THEORY OF OPERATION	6-2
CD - W/BREAKER POINTS	4-53	POWERHEAD BREAK-IN	6-41
CD - W/SENSOR	4-41	BREAKING IN A POWERHEAD	6-41
CD - W/TIMER BASE	4-62	GENERAL INFORMATION	6-41
DISTRIBUTOR BATTERY	4-32	POWERHEAD OVERHAUL	6-4
DISTRIBUTOR MAGNETO	4-21	BOTTOM SEAL	6-15
FLYWHEEL MAGNETO	4-13	BYPASS COVER	6-11
IGNITION SYSTEMS - GENERAL INFORMATION	4-8	CENTERING PIN	6-17
BREAKER POINTS	4-11	CONNECTING RODS, PISTONS & RINGS	6-21
COIL POLARITY CHECK	4-10	CRANKCASE COVER	6-19
CONDENSER	4-12	CRANKSHAFT & BEARING	6-30
INTRODUCTION & IDENTIFICATION	4-8	CYLINDER BLOCK	6-40
KEY SWITCH	4-11	CYLINDER HEAD	6-4
SPARK PLUG EVALUATION	4-9	EXHAUST COVER	6-12
TROUBLESHOOTING	4-12	MAIN BEARING BOLTS & CRANKCASE SIDE BOLTS	6-17
VACUUM CUT-OUT SWITCH	4-12	PRELIMINARY WORK	6-4
WIRING HARNESS	4-11	REED VALVES	6-8
LINKAGE, CABLES AND SHAFTS	2-7	TOP SEAL	6-14
LUBRICATION	2-7	PRESSURIZED FUEL SYSTEM	3-8
RECOMMENDED LUBRICANT	2-7	DISASSEMBLY & ASSEMBLY	3-9
LOWER UNIT		PRESTOLITE STARTERS	4-97
CHECKING OIL LEVEL	2-12	CLEANING & INSPECTION	4-98
DRAINING & FILLING	2-13	DISASSEMBLY & ASSEMBLY	4-97
OIL RECOMMENDATIONS	2-12	REMOVAL & INSTALLATION	4-97
TYPE I - NON-SHIFTING	7-4	TESTING	4-98
TYPE II -		PROPELLER	2-16
MECHANICAL SHIFT LOWER UNIT, SPLIT GEARCASE (5-25 HP)	7-8	CLEARING THE FISH LINE TRAP	2-17
TYPE III - MECHANICAL SHIFT LOWER UNIT, SPLIT GEARCASE (28-40 HP)	7-20	FROZEN PROPELLER	2-21
TYPE IV - MANUAL SHIFT LOWER UNIT, SPLIT LOWER UNIT	7-27	INSPECTION	2-17
TYPE V - MANUAL SHIFT LOWER UNIT,		REMOVAL & INSTALLATION	2-17
SINGLE ENCLOSED HOUSING	7-35	REBUILDING TIPS	6-4
TYPE VI - ELECTROMATIC LOWER UNIT (ALL EXC. 100 HP)	7-44		
TYPE VII - ELECTROMATIC LOWER UNIT (100 HP)	7-55		
TYPE VIII - ELECTRIC SHIFT LOWER UNITS, 2 SOLENOIDS	7-64		

CLEANLINESS	6-4	SHIFT/THROTTLE CABLE	9-16
REED INSTALLATION	6-4	REMOVAL & INSTALLATION	9-16
POWERHEAD COMPONENTS	6-4	TROUBLESHOOTING	9-16
TORQUE VALUES	6-4	SPARK PLUG WIRES	2-32
REED VALVES	6-8	REMOVAL & INSTALLATION	2-33
ACTUAL OPERATION	6-8	TESTING	2-32
BROKEN REED	6-8	SPARK PLUGS	2-29
CLEANING & SERVICING	6-10	HEAT RANGE	2-29
DESCRIPTION & OPERATION	6-8	INSPECTION & GAPPING	2-31
REED BOX INSTALLATION	6-10	READING	2-31
REED DESIGNS	6-8	REMOVAL & INSTALLATION	2-30
REED STOPS	6-9	SPECIFICATIONS	1-28
REED VALVE ADJUSTMENT	6-9	CAPACITIES	
REED-TO-REED BOX CHECK	6-9	CONDENSER	4-106
V-TYPE REED BOXES	6-9	CONVERSION FACTORS	1-28
REGULATIONS FOR YOUR BOAT	1-4	GENERATOR	4-105
CAPACITY INFORMATION	1-4	LOWER UNIT APPLICATIONS	7-91
CERTIFICATE OF COMPLIANCE	1-5	LOWER UNIT CAPACITIES	7-92
DOCUMENTING OF VESSELS	1-4	LUBRICATION CHART	
HULL IDENTIFICATION NUMBER	1-4	MAINTENANCE INTERVALS	
LENGTH OF BOATS	1-4	METRIC BOLTS - TYPICAL TORQUE VALUES	1-29
NUMBERING OF VESSELS	1-4	OIL/FUEL MIXTURE RATIOS	2-56
REGISTRATION OF BOATS	1-4	POWERHEAD	6-51
SALES AND TRANSFERS	1-4	REGULATOR	4-107
VENTILATION	1-5	SPARK PLUG DIAGNOSIS	
VENTILATION SYSTEMS	1-5	STARTER APPLICATIONS	10-32
REMOTE CONTROL CABLES	9-25	STARTER MOTOR	4-107
RIGGING	9-27	STARTER ROPE	10-34
SHIFT CABLE	9-26	TORQUE	6-55
THROTTLE CABLE	9-25	TUNE-UP	1-2 CYL
REMOTE CONTROLS	9-2	TUNE-UP - 3 CYL & V4	
DESCRIPTION & OPERATION	9-2	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES	1-30
DOUBLE LEVER SHIFT BOX	9-3	STARTER	
ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON)	9-7	AUTOLITE	4-91
ELECTRIC PUSHBUTTON GEAR BOXES (EVINRUDE)	9-11	DELCO-REMY	4-95
GENERAL INFORMATION	9-2	PRESTOLITE	4-97
SINGLE LEVER HYDRO-ELECTRIC REMOTE CONTROL SHIFT BOX	9-20	STARTER DRIVE GEAR	4-99
SINGLE LEVER REMOTE CONTROL SHIFT BOX	9-16	DISASSEMBLY & ASSEMBLY	4-99
REQUIRED SAFETY EQUIPMENT	1-6	IDENTIFICATION	4-99
FIRE EXTINGUISHERS	1-6	STARTING SYSTEM	4-88
MINIMUM REQUIREMENTS	1-6	AUTOLITE STARTERS	4-91
PERSONAL FLOTATION DEVICES	1-7	DELCO-REMY STARTERS	4-95
SOUND PRODUCING DEVICES	1-9	DESCRIPTION & OPERATION	4-88
TYPES OF FIRES	1-6	PRESTOLITE STARTERS	4-97
VISUAL DISTRESS SIGNALS	1-9	STARTER DRIVE GEAR	4-99
WARNING SYSTEM	1-7	TROUBLESHOOTING	4-89
RE-COMMISSIONING	2-54	STATOR	4-96
REMOVAL FROM STORAGE	2-54	REPLACEMENT	4-86
RIGGING	9-27	STEERING ARM	2-7
SAFETY IN SERVICE	1-13	LUBRICATION	2-7
DO'S	1-13	RECOMMENDED LUBRICANT	2-7
DON'TS	1-13	STORAGE (WHAT TO DO BEFORE & AFTER)	2-52
SAFETY TOOLS	1-17	RE-COMMISSIONING	2-54
EYE & EAR PROTECTION	1-17	WINTERIZATION	2-52
WORK CLOTHES	1-17	SWIVEL BRACKET & TILT SUPPORT	2-8
WORK GLOVES	1-17	LUBRICATION	2-8
SHIFT CABLE	9-26	RECOMMENDED LUBRICANT	2-8
INSTALLATION AT THE ENGINE	9-26	TACHOMETER	4-104
INSTALLATION AT THE REMOTE	9-26	TEMPERATURE GAUGE AND/OR WARNING LIGHT	4-102
SHOP EQUIPMENT	1-17	TEMPERATURE GAUGE	4-102
CHEMICALS	1-17	THERMOMELT STICKS	4-103
SAFETY TOOLS	1-17	WARNING LIGHTS	4-102
SINGLE LEVER HYDRO-ELECTRIC REMOTE CONTROL SHIFT BOX	9-20	TEST EQUIPMENT	4-4
CONTROL UNIT	9-22	JUMPER WIRES	4-4
ASSEMBLY	9-24	MULTI-METERS	4-5
CLEANING & INSPECTION	9-22	TEST LIGHTS	4-5
DISASSEMBLY	9-22	THEORY OF OPERATION	6-2
DESCRIPTION & OPERATION	9-20	ACTUAL OPERATION	6-3
TROUBLESHOOTING	9-20	INTAKE/EXHAUST	6-2
SINGLE LEVER REMOTE CONTROL SHIFT BOX	9-16	LUBRICATION	6-2
DESCRIPTION & OPERATION	9-16	PHYSICAL LAWS	6-2
SHIFT BOX	9-16	POWER STROKE	6-2
DISASSEMBLY & ASSEMBLY	9-16	SUMMARY	6-4

10-40 MASTER INDEX

THERMOSTAT (& PRESSURE RELIEF VALVE)	5-5	ELECTRICAL SYSTEMS	4-6
REMOVAL & INSTALLATION	5-5	GENERAL IGNITION	4-12
TESTING	5-5	GENERATOR	4-72
THROTTLE CABLE	9-25	LOWER UNIT	
INSTALLATION AT THE REMOTE	9-25	TYPE I - NON-SHIFTING	7-4
INSTALLATION AT THE ENGINE	9-25	TYPE II - MECHANICAL SHIFT, SPLIT GEARCASE (5-25 HP)	7-11
TILT TUBE ASSEMBLY	2-8	TYPE III - MECHANICAL SHIFT, SPLIT GEARCASE (28-40 HP)	7-20
LUBRICATION	2-8	TYPE IV - MANUAL SHIFT, SPLIT LOWER UNIT	7-27
RECOMMENDED LUBRICANT	2-8	TYPE V - MANUAL SHIFT, SINGLE ENCLOSED HOUSING	7-35
TIMING & SYNCHRONIZATION - 1 & 2 CYL ENGINES	2-37	TYPE VI - ELECTROMATIC (ALL EXC. 100 HP)	7-44
GENERAL INFORMATION	2-37	TYPE VII - ELECTROMATIC (100 HP)	7-55
TIMING & SYNCHRONIZATION	2-37	TYPE VIII - ELECTRIC SHIFT, 2 SOLENOIDS	7-66
PRIMARY PICK-UP ADJUSTMENTS & LOCATIONS	2-37	TYPE IX - MECHANICAL SHIFT, SLIDING CLUTCH DOG	7-80
TIMING & SYNCHRONIZATION - 3 CYL & V4 ENGINES	2-41	SINGLE LEVER HYDRO-ELECTRIC REMOTE	
CARBURETOR ADJUSTMENTS	2-41	CONTROL SHIFT BOX	9-20
HIGH-SPEED ADJUSTMENT	2-41	SINGLE LEVER REMOTE CONTROL SHIFT BOX	9-16
IDLE ADJUSTMENT	2-41	STARTING SYSTEM	4-89
GENERAL INFORMATION	2-41	TRIM/TILT	8-3
SYNCHRONIZATION	2-42	TUNE-UP	2-26
1958-59 50 HP	2-42	COMPRESSION CHECK	2-28
1964-66 60 HP, 1960-65 75 HP, 1964-65 90 HP & 1966-67 80/100 HP	2-43	COOLING SYSTEM MAINTENANCE	2-36
1968-69 55 HP & 1970-71 60 HP	2-44	DE-CARBONING THE PISTONS	2-27
1968 65, 85 & 100 HP	2-46	FUEL PUMP	3-66
1969 85 HP	2-46	FUEL SYSTEM	3-3
1970 85 HP & 1969-70 115 HP	2-46	FUEL SYSTEM MAINTENANCE	2-34
1971-72 85, 100 & 125 HP	2-47	IGNITION & ELECTRICAL SYSTEM MAINTENANCE	2-34
1972 65 HP	2-48	INTRODUCTION	2-26
TIMING	2-48	SPARK PLUG WIRES	2-32
TIMING POINTER ADJUSTMENT - 1971-72 85, 100 & 125 HP	2-48	SPARK PLUGS	2-29
1968-69 55 HP & 1970-71 60 HP	2-49	TUNE-UP SEQUENCE	2-26
1968 65 HP, 1968-70 85 HP, 1968-69 100 HP & 1969-70 115 HP	2-50	TUNE-UP SEQUENCE	2-26
CDI/FLYWHEEL W/SENSOR (1967 100 HP)	2-50	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
1971-72 125 HP	2-51	BASIC ELECTRICAL THEORY	4-2
TOOLS	1-19	ELECTRICAL COMPONENTS	4-2
ELECTRONIC TOOLS	1-23	PRECAUTIONS	4-8
HAND TOOLS	1-19	TEST EQUIPMENT	4-4
MEASURING TOOLS	1-25	TESTING	4-6
OTHER COMMON TOOLS	1-22	TROUBLESHOOTING	4-6
SPECIAL TOOLS	1-23	WIRE & CONNECTOR REPAIR	4-7
TOP SEAL	6-14	VOLTAGE REGULATOR	4-74
REMOVAL & INSTALLATION	6-14	REMOVAL & INSTALLATION	4-74
1 & 2 CYLINDER	6-14	WATER CHOKE	3-63
3 CYLINDER & V4	6-14	DESCRIPTION	3-63
TRIM/TILT ASSEMBLY	8-3	REMOVAL & INSTALLATION	3-64
REMOVAL & INSTALLATION	8-3	WATER PUMP	
TRIM/TILT MOTOR	8-4	INSPECTION & OVERHAUL	5-10
ASSEMBLY	8-6	REMOVAL & INSTALLATION	5-7
CLEANING & INSPECTION	8-5	TYPE I - NON-SHIFTING	7-7
BRUSH REPLACEMENT	8-5	TYPE II - MECHANICAL SHIFT, SPLIT GEARCASE (5-25 HP)	7-19
CHECKING END HEAD BUSHINGS	8-5	TYPE III - MECHANICAL SHIFT, SPLIT GEARCASE (28-40 HP)	7-26
CHECKING FIELD COILS	8-5	TYPE IV - MANUAL SHIFT, SPLIT LOWER UNIT	7-34
CHECKING FOR A GROUNDED ARMATURE	8-5	TYPE V - MANUAL SHIFT, SINGLE ENCLOSED HOUSING	7-44
CHECKING FOR A SHORTED ARMATURE	8-5	TYPE VI - ELECTROMATIC (ALL EXC. 100 HP)	7-55
DISASSEMBLY	8-4	TYPE VII - ELECTROMATIC (100 HP)	7-63
TESTING	8-4	TYPE VIII - ELECTRIC SHIFT, 2 SOLENOIDS	7-77
TRIM/TILT SYSTEMS	8-2	TYPE IX - MECHANICAL SHIFT, SLIDING CLUTCH DOG	7-89
DESCRIPTION & OPERATION	8-2	WINTERIZATION	2-52
POWER TRIM/TILT RESERVOIR	8-2	PREPPING FOR STORAGE	2-52
TRIM/TILT ASSEMBLY	8-3	WIRE & CONNECTOR REPAIR	4-7
TRIM/TILT MOTOR	8-4	WIRING DIAGRAMS	4-108
TROUBLESHOOTING MECHANICAL COMPONENTS	8-3	INDEX	4-108
TROUBLESHOOTING		1-CYL MOTORS	4-108
ALTERNATOR	4-77	2 CYL. MOTORS	4-108
BASIC OPERATING PRINCIPLES	1-13	3 CYL. MOTORS	4-116
CD IGNITION, W/POINTS	4-53	V4 MOTORS	4-118
CD IGNITION, W/SENSOR	4-42	ZINCS	2-21
CD IGNITION, W/TIMER BASE	4-64	INSPECTION	2-22
COOLING SYSTEM	5-3	SERVICING	2-22
DISTRIBUTOR MAGNETO IGNITION	4-23	2-STROKE ENGINE OIL	2-11
DISTRIBUTOR BATTERY IGNITION	4-34	FUEL:OIL RATIO	2-11
DOUBLE LEVER SHIFT BOX	9-3	OIL RECOMMENDATIONS	2-11
ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON)	9-7		
ELECTRIC PUSHBUTTON GEAR BOXES (EVINRUDE)	9-11		