



Installation and Troubleshooting Guide

All rights reserved. Reproduction or use of content, in any manner, without express written permission by CDI Electronics, Inc., is prohibited.

CDI P/N: 511-9764 Neon 1 Cyl Spark Tester

NOTE: The 511-9764 single cylinder tester is for use in checking spark to the spark plug. **Do not operate the engine over 3 minutes at a time due to heat build up inside the tester. Overheating the tester will destroy the unit.**

For Cranking Test:

1. Disconnect the spark plug wire from the spark plug and connect it to the screw terminal in the tester.
2. Connect the large spring clip to engine ground.
3. Crank the engine over and watch for consistent firing.

WARNING! Prolonged usage of the tester can overheat the starter. Allow time for the starter to cool down between tests.

For Running Test:

1. Disconnect the spark plug wire from the spark plug and connect it to the screw terminal in the tester.
2. Connect the spark tester to the spark plug.
3. Start the engine and watch for consistent firing.