



Core Change For Thru-Bolt Mounted Ignition Coil

1. Remove (and discard) the following parts from the ignition coil:
 - a. Rubber Boot
 - b. Ground Link
 - c. Core Halves (2)

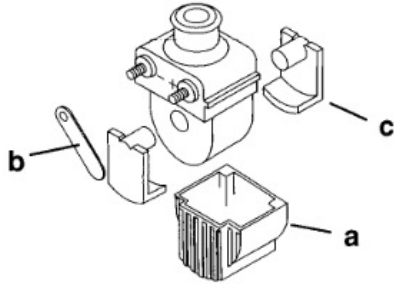

2. Apply a light coat of RTV Sealer around the outside diameter on the thru-hole core (provided). Install the thru-hole core.

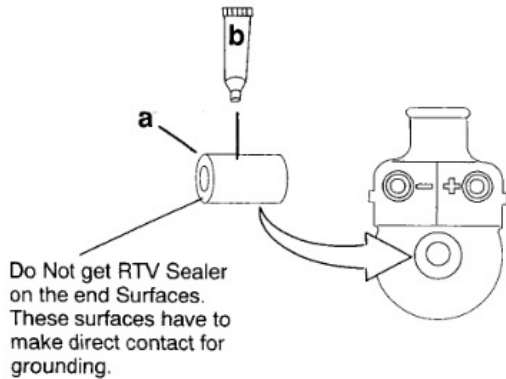


- a - Thru-Hole Core (Provided)
- b - RTV Sealer


Applying RTV Sealer (All Ignition Coils Except Thru-Bolt Mounted)

NOTE: Apply RTV Sealer around the core pegs before installing ignition coil.

1. Remove rubber boot from ignition coil.

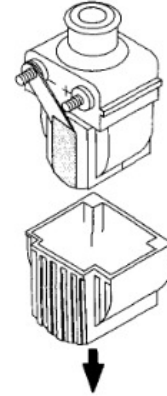

2. Remove core halves and apply a light coat of RTV Sealer around the outside diameter on the core pegs.

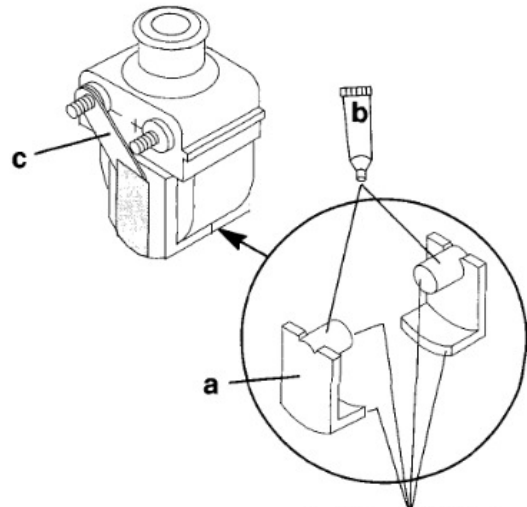

- a - Core Halves
- b - RTV Sealer
- c - Ground Link - Tape to Core

3. Reinstall the core halves into the coil.
4. Tape the metal ground link to the core.
5. Reinstall the rubber boot.