


IGNITION MODULES

1. Unplug wiring harness connector from ignition module.
2. Remove stainless steel screws that retain ignition module to distributor body. Retain screws for re-use.

IMPORTANT: Thermal-conductive Grease must be applied to the back of the ignition module to conduct heat away from the module and to prevent corrosion.

3. Apply a thin coat of Thermal-conductive Grease (from kit) evenly across the metal back of ignition module.
4. Install ignition module using the stainless steel screws. Torque screws to 10 lb.in. (1.1 N·m).
5. Check that terminals of wiring harness connector are clean and free of corrosion. Plug connector into ignition module.

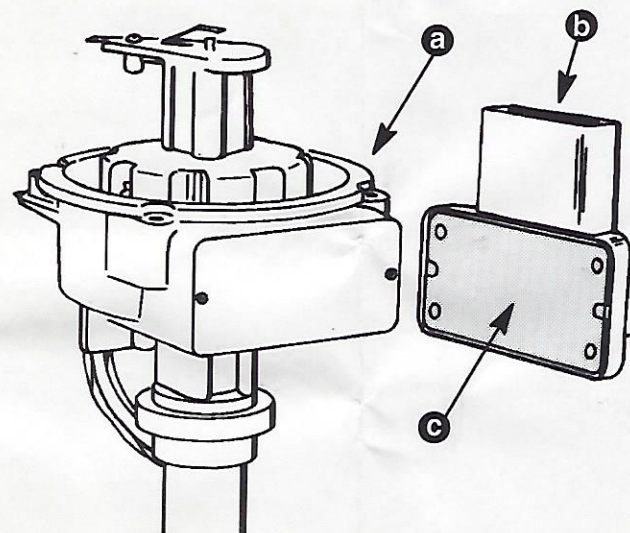

71800

- a - Distributor Housing
b - Ignition Module
c - Apply Thermalconductive Grease