


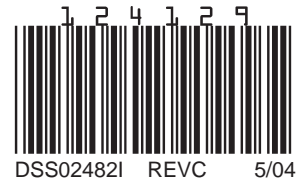

EVINRUDE[®]
Johnson[®]






INSTALLATION INSTRUCTIONS

Remote Steering Adapter Kit

P/N 173972

SAFETY

These installation instructions contain information that can help prevent personal injury and damage to equipment. Understand the following symbols before proceeding:

 Safety Warning	Alerts you to the possibility of danger and identifies information that will help prevent injuries.
 Note	Identifies information that will help prevent damage to machinery.
 Important	Appears next to information that controls correct assembly and operation of the product.

TO THE OWNER


The assembly procedures outlined in this sheet should be performed by a skilled technician. If you have questions, see your DEALER. Save these instructions in your owner's kit. This sheet contains information important to the future use and maintenance of your engine.

TO THE INSTALLER


Give this sheet to the owner. Advise the owner of any special operation or maintenance information contained in the instructions.

PREFACE


This kit is required to adapt a 1980 (CS) thru 1990 (ES) *Evinrude[®]* and *Johnson[®]* 6, 7.5, and 8 HP outboard with remote steering.

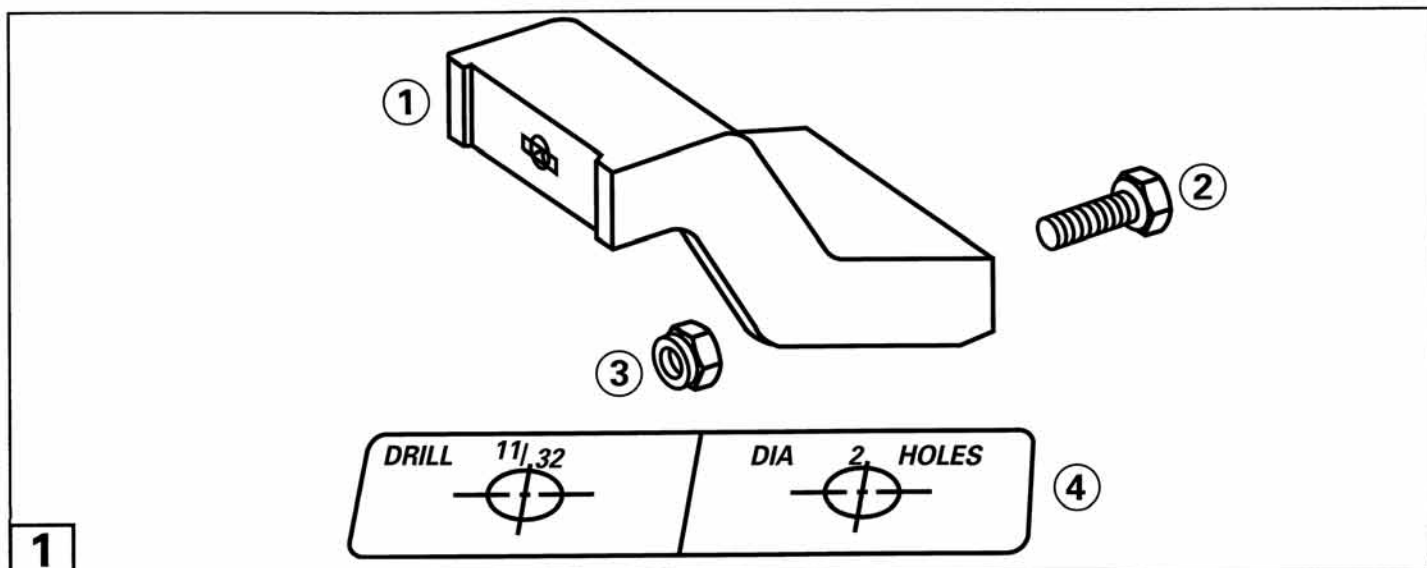


DRC6986

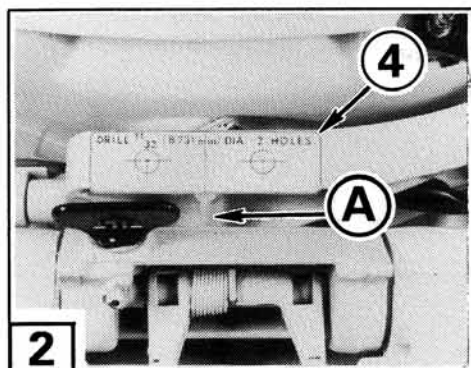

CO3117

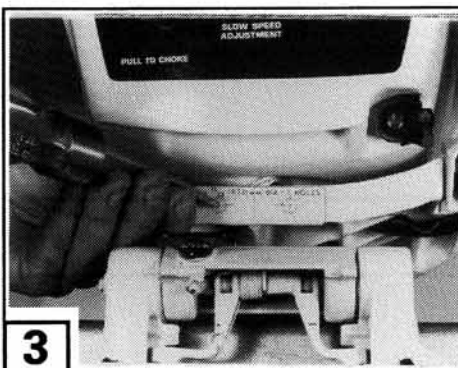

CO3104

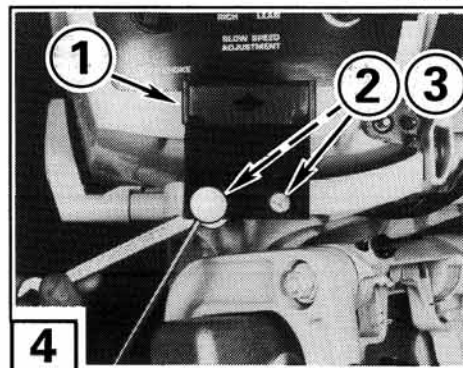

CO3105


1 Contents of Kit:

Ref.	Name of Part	Qty.
①	Steering Bracket	1
②	Screw	2
③	Locknut	2
④	Template	1

In addition to this kit, you will need a Steering Connector Kit. If remote shift and throttle control are desired, order Remote Control Adapter Kit. A remote control and two control cables will be required in addition to the Remote Adapter Kit.

2 Position steering bracket template ④ with center of template with center of rib **A**, on bottom of steering bracket.

3 Center punch and drill holes using an 1 1/32 in. (9 mm) drill bit.

4  Install steering bracket ① using two screws ② and locknuts ③. **Tighten nuts to a torque of 120-140 in. lbs. (14-16 N-m).**



Safety Related