




EVINRUDE[®]
Johnson[®]

IGNITION SWITCH KIT

Part No. 386545

Installation Instructions

When using this ignition switch as a replacement for 277882, 378238 or 379047 switches you should attach your electrical leads as indicated below. The three switches being replaced are shown below. When installing the new switch, locate your old switch below and make the wiring connections as indicated in the chart. (Terminals on older switches were color coded while new switch is not.)

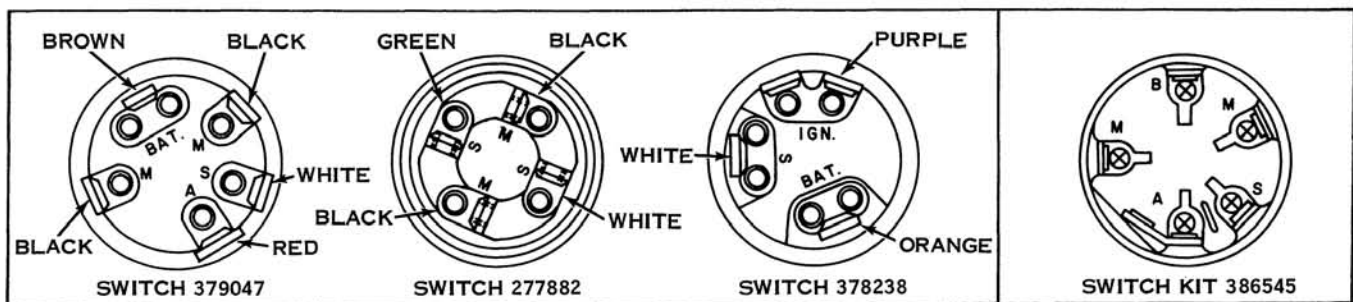

LEAD FROM THIS TERMINAL	WITH THIS COLOR CODE	ON THIS SWITCH	IS CONNECTED TO THIS TERMINAL ON NEW SWITCH
BAT	BROWN	379047	"B"
"S"	GREEN	277882	
BAT	ORANGE	378238	
"M"	BLACK	379047 277882	"M"
"A"	RED	379047	"A"
IGN	PURPLE	378238	
"S"	WHITE	379047	"S"
		277882	
		378238	

