



**EVINRUDE<sup>®</sup>**  
**Johnson<sup>®</sup>**






## INSTALLATION INSTRUCTIONS

### Detune Kit P/N 344560

#### SAFETY

These installation instructions contain information that can help prevent personal injury and damage to equipment. Understand the following symbols before proceeding:

 <b>Safety Warning</b>	Alerts you to the possibility of danger and identifies information that will help prevent injuries.
 <b>Note</b>	Identifies information that will help prevent damage to machinery.
 <b>Important</b>	Appears next to information that controls correct assembly and operation of the product.

#### TO THE OWNER


The assembly procedures outlined in this sheet should be performed by a skilled technician. If you have questions, see your DEALER. Save these instructions in your owner's kit. This sheet contains information important to the future use and maintenance of your engine.

#### TO THE INSTALLER


Give this sheet to the owner. Advise the owner of any special operation or maintenance information contained in the instructions.

#### PREFACE

This kit reduces 3-cylinder 50 thru 70 HP remote electric, tiller electric, and rope start *Johnson<sup>®</sup>* and *Evinrude<sup>®</sup>* outboards to 35 HP rated at 5500 RPM.

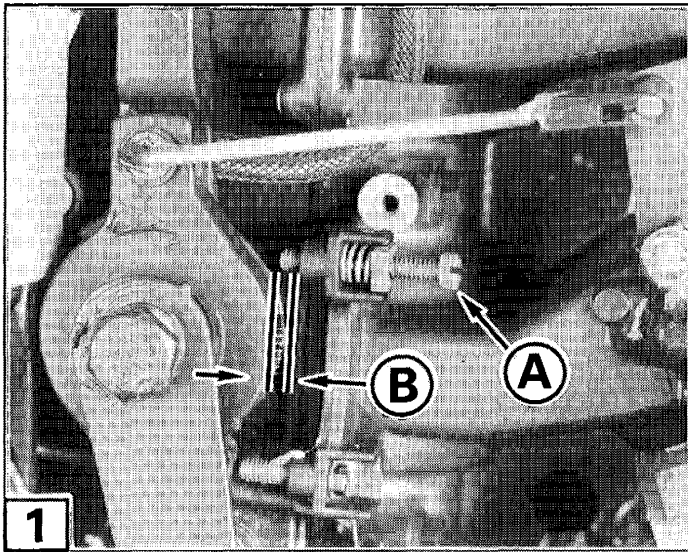

47279

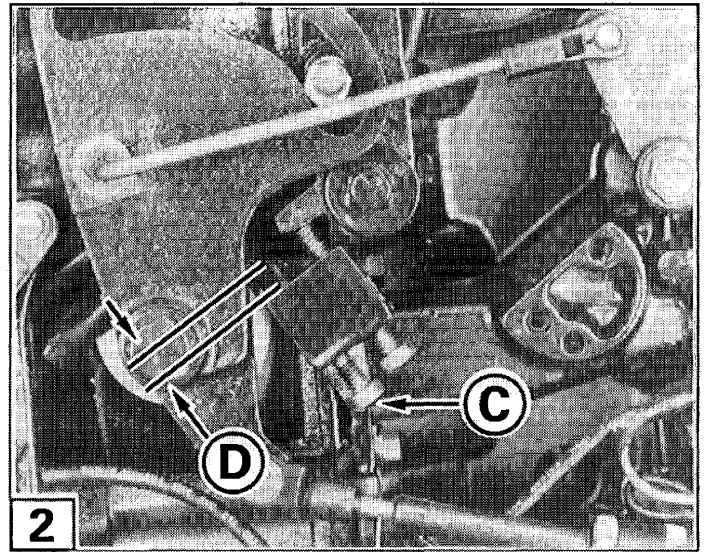

26826

Tune outboard to specifications in **Service Manual** before continuing.

## Remote Electric Models

- 1** With engine stopped, adjust wide-open throttle stop screw (A) so its end extends  $\frac{7}{16}$  (11 mm) (B) in from casting.

## Rope Start and Tiller Electric Models

- 2** With engine stopped, replace wide-open throttle stop screw (C) with 2 in. (52 mm) screw, P/N 331635. Adjust screw so its end extends  $\frac{3}{4}$  in. (19 mm) (D) from casting.

Clean dirt grease and oil from engine cover and apply "35 HP" decals, supplied in kit, to sides of engine cover.