



EVINRUDE[®]
Johnson[®]

EMERGENCY STOP SWITCH INSTALLATION INSTRUCTIONS

Contents of Kit

QTY	Description	P/N
1	Emergency stop switch assembly	586721
1	Switch lead assembly - includes: <ul style="list-style-type: none">• 2 pin female Amphenol connector• 2 pin to 1 pin Amphenol adapter	516874

Installation Instructions

Remove cover plate below throttle.




000759

Replace with emergency stop switch assembly.




000760

Run stop switch leads through tiller arm, then through lower motor cover grommet.

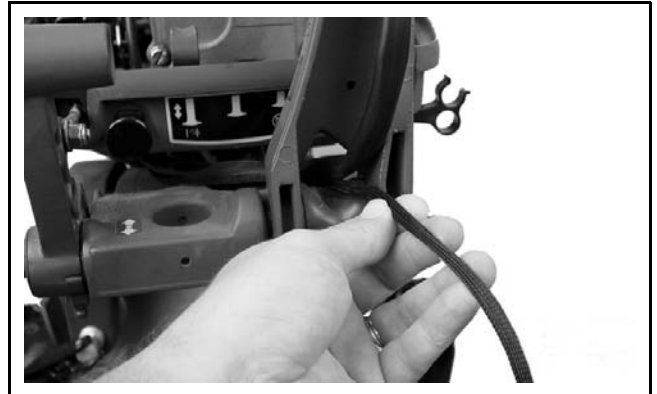

000761

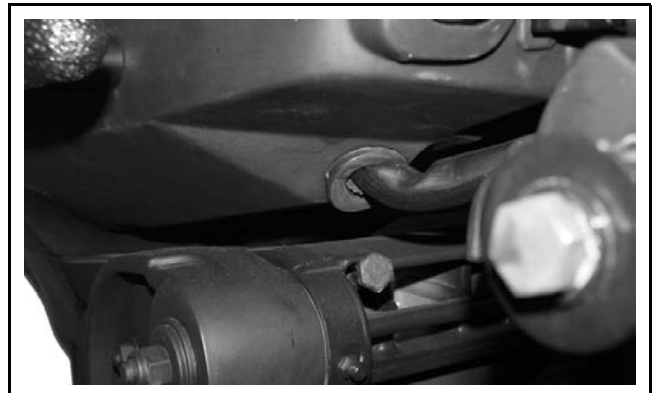

000762


Slide stop switch leads under starboard motor mount.



000763




Remove electrical bracket cover, then pull stop switch leads through rear of electrical bracket.

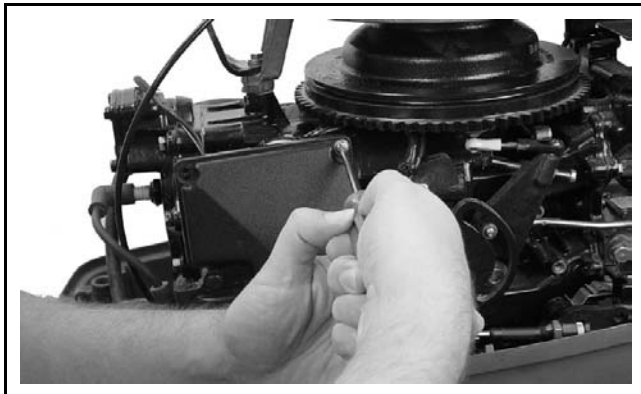

000764


Disconnect single pin Amphenol connector.

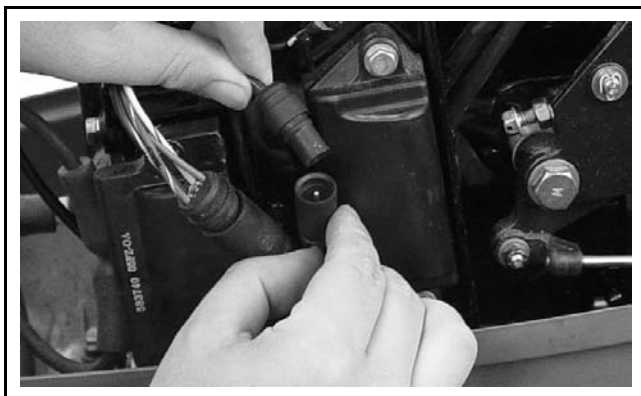

000765

Using appropriate Amphenol tools, install Amphenol adapter.


- Push black lead out of female single pin Amphenol connector.
- Press black lead and stop switch black/yellow lead into dual pin Amphenol connector. Black lead should be in entry marked "B" and black/yellow lead should be in entry marked "A."
- Plug both connectors into appropriate ends of Amphenol adapter.

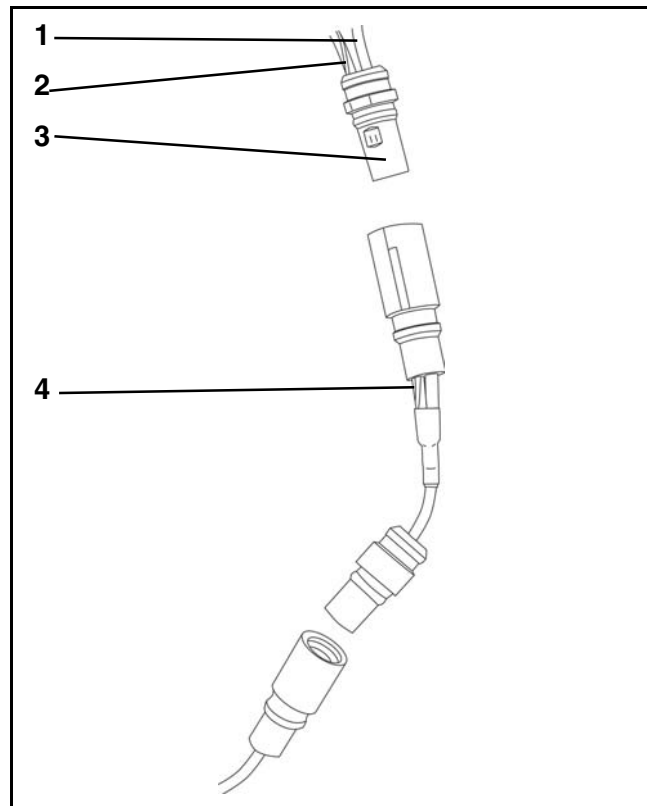

000770


1. Black lead in entry "B"
2. Stop switch black/yellow lead in entry "A"
3. Dual lead Amphenol connector
4. Amphenol adapter black/yellow lead

Connect stop switch ground lead to ground in ignition area.

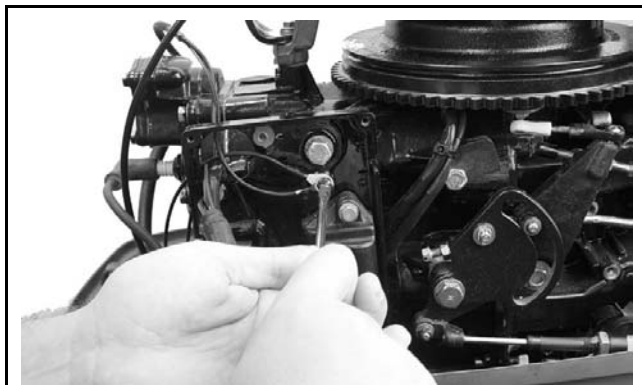

000766

Reinstall electrical bracket cover.

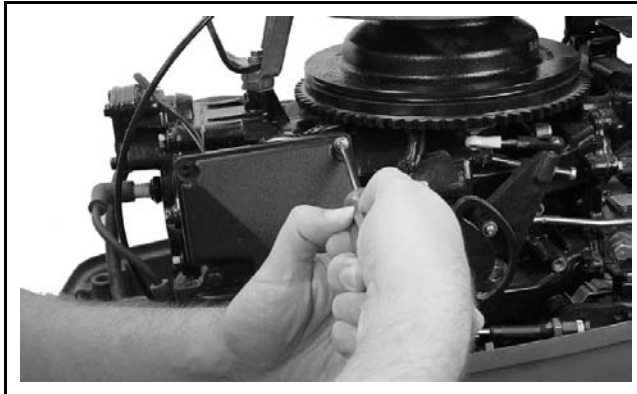

000767


Run engine. Verify stop switch operation by:

- pressing the ignition stop button.



000768

- pulling the lanyard.

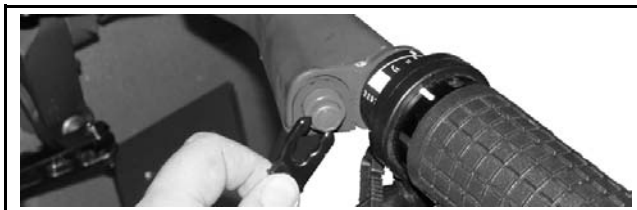

000769