



REPLACEMENT POWERHEAD INSTALLATION SEAL KIT

This seal kit is applicable to 2000 and newer models only. Some components may not be used on your specific model. Refer to appropriate parts catalog for specific parts application.

P/N	Description	Quantity
350357	Gasket, Cover Plate	1
344347	Gasket, Intake Manifold - Starboard	1
344341	Gasket, Intake Manifold - Port	1
344335	Gasket, Manifold to Throttle Body	2
335981	Seal, Pressure Relief Valve	1
339044	Gasket, Thermostat to Cylinder Head	2
331188	O-Ring, Thermostat Cover	2
346354	Gasket, Powerhead Base	1
979803	Oetiker Clamp	1
984302	Oetiker Clamp	2
980863	Oetiker Clamp	6
321921	O-Ring, Pressure Relief	1
348449	Bolt, Upper Motor Mount (1)	2
344277	Bolt, Upper Motor Mount (2)	2
336135	Bolt, Flywheel	5
349729	Oetiker Clamp	2
434927	Check Valve	1
5001504	Oil Lift Pump (DO NOT use on 2002 and newer)	1
5001211	Spark Plug	6

(1) 9/16-12 for 2001 and newer models

(2) 1/2-13 for 2000 and older models

IMPORTANT: To avoid damaging the temperature switch/sensor, do NOT pull on the wires to remove it. Instead, gently pull out the grommet to remove the switches.


Follow instructions on the reverse side before completing powerhead installation and set-up.

(Continued on reverse)



Please route to:

☐ Service	☐ Init.
☐ Sales	☐
☐ Parts	☐

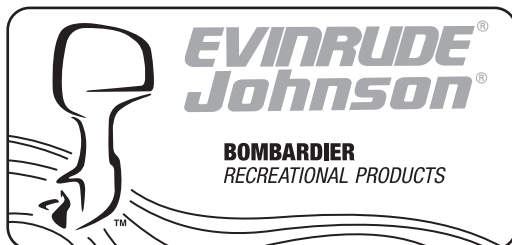

Date: October, 2002

(Rev 1) **No.** 2002-03

MODELS: Direct Injection


SUBJECT: Diagnostic software EMMDIAG
version 1.42 for PCs

PROBLEM


Certain functions of EMMDIAG version 1.42 for PCs are ineffective and incomplete. Continued use may result in erroneous information and improper set-up operations. Discontinue use of version 1.42 and upgrade to version 1.42b.

SOLUTION

- Destroy all disks containing the previous version EMMDIAG 1.42 (Kit P/N 5005058 or Floppy Disk version 3030328). This is critical to ensure that only the latest software version is installed on each of the diagnostic computers that your technicians access. This ensures diagnostic consistency.
- Download the new version EMMDIAG 1.42b from *DealerPort* or order it using Kit P/N 5005388.
- Continue to follow the Users Guide for *Ficht*® Diagnostic Software Version 1.42 (P/N 350281).

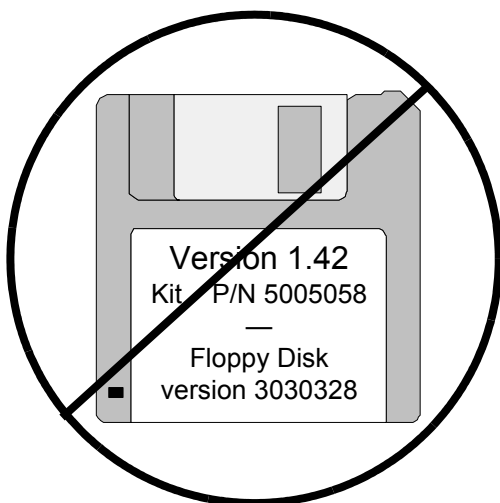

DISCARD OLD VERSION

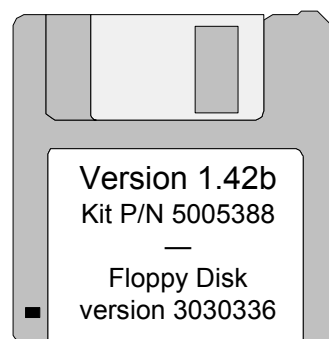

UPGRADE TO NEW VERSION