



REPLACEMENT POWERHEAD INSTALLATION SEAL KIT

This seal kit is applicable to 2001 and newer models only. Some components may not be used on your specific model. Refer to appropriate parts catalog for specific parts application.

P/N	Description	Quantity
328622	Gasket, Intake Manifold - Upper	1
331532	Gasket, Intake Manifold - Lower	1
332319	Gasket, Intake to Throttle Body	3
339299	Seal, Thermostat	2
301917	O-Ring, Thermostat Cover	2
344472	Gasket, Valley Cover	1
347205	Gasket, Powerhead Base	1
346152	Oetiker Clamp (25.6mm)	4
346151	Oetiker Clamp (21mm)	2
348478	Check Valve	1
5001505	Oil Lift Pump (Sensor on pump not used on 2002 and later)	1
5001866	Spark Plug	6

IMPORTANT: To avoid damaging the temperature switch/sensor, do NOT pull on the wires to remove it. Instead, gently pull out the grommet to remove the switches.

Follow instructions on the reverse side before completing powerhead installation and set-up.

(Continued on reverse)



Rev. 5







Date: October, 2002 (Rev 1) **No.** 2002-03

MODELS: Direct Injection


SUBJECT: Diagnostic software EMMDIAG version 1.42 for PCs

PROBLEM

Certain functions of EMMDIAG version 1.42 for PCs are ineffective and incomplete. Continued use may result in erroneous information and improper set-up operations. Discontinue use of version 1.42 and upgrade to version 1.42b.

SOLUTION

- Destroy all disks containing the previous version EMMDIAG 1.42 (Kit P/N 5005058 or Floppy Disk version 3030328). This is critical to ensure that only the latest software version is installed on each of the diagnostic computers that your technicians access. This ensures diagnostic consistency.
- Download the new version EMMDIAG 1.42b from *DealerPort* or order it using Kit P/N 5005388.
- Continue to follow the Users Guide for Ficht® Diagnostic Software Version 1.42 (P/N 350281).

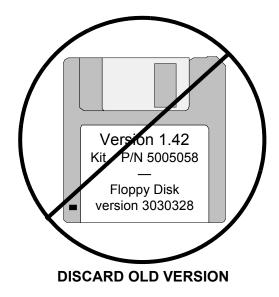



UPGRADE TO NEW VERSION