


INSTRUCTION SHEET

Holley Carburetor – Model 2300

General Exploded View

The general design and parts shown will vary to individual units covered on this instruction sheet.

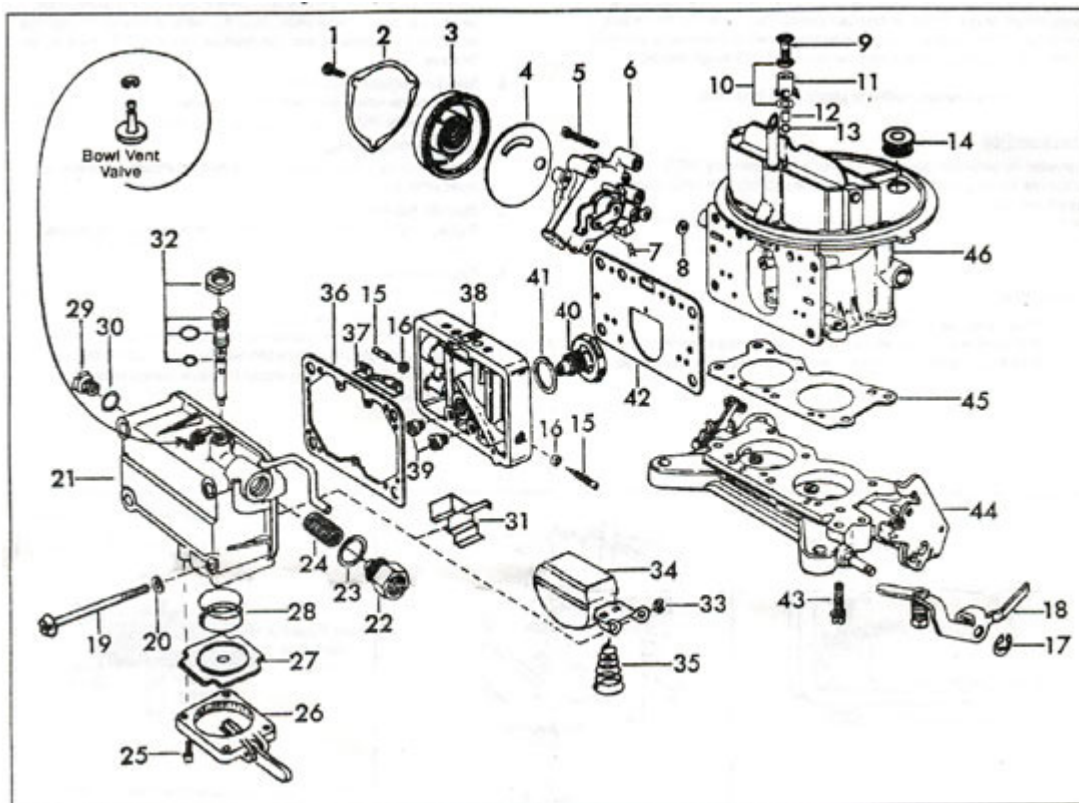

Nomenclature

Ref. No.

1. Screw-Stat Cover
2. Clamp-Stat Cover
3. Stat Cover
4. Gasket –Stat Cover
5. Screw & Lockwasher – Choke Housing Assembly
6. Choke Housing Assembly
7. Retainer – Choke Rod Lower
8. Gasket – Choke Housing
9. Screw – Pump Discharge Nozzle
10. Gaskets – Pump Discharge Nozzle
11. Nozzle – Pump Discharge
12. Weight – Pump Discharge
13. Ball – Pump Discharge Check
14. Grommet – Cold Air Choke Tube
15. Needle – Idle Adjusting
16. Seal – Idle Needle
17. Retainer – Pump Operating Lever
18. Lever – Pump Operating
19. Screw – Fuel Bowl
20. Gasket – Fuel Bowl Screw
21. Fuel Bowl Assembly
22. Fitting – Fuel Inlet
23. Gasket – Fuel Inlet Fitting

Ref. No.

24. Screen-Fuel Inlet
25. Screw & Lockwasher – Pump
26. Pump Cover Assembly
27. Diaphragm – Pump
28. Spring – Diaphragm Return
29. Plug – Fuel Level Plug
30. Gasket – Fuel Level Plug
31. Baffle Plate
32. Needle, Seat, O-Rings & Nut Assembly
33. Retainer – Float
34. Float Assembly
35. Spring – Float
36. Gasket – Fuel Bowl
37. Baffle – Metering Body Vent
38. Body – Main Metering
39. Main Jets
40. Power Valve
41. Gasket – Power Valve
42. Gasket – Metering Body
43. Screw & Lockwasher – Throttle Body
44. Throttle Body Assembly
45. Gasket – Throttle Body
46. Main Body Assembly

Disassembly

Use the exploded view on the opposite side of this sheet as a guide. The numerical sequence may generally be followed to disassemble unit far enough to permit cleaning and inspection.

Cleaning

Soak parts long enough to soften and remove all foreign material. Use a carburetor cleaning solvent, lacquer thinner or denatured alcohol. Make certain the throttle body is free of all hard carbon deposits. Rinse off in suitable solvent and blow out all passages in casting with compressed air and check to fully insure thorough cleaning of obscure area. Caution: Do not soak rubber, leather or plastic parts in solvent.

Reassembly

Reassemble the carburetor using the reverse order of disassembly. NOTE: When installing idle adjusting needles (15), run them down until they seat lightly, then back them out one turn.

After installing the float, position the fuel bowl upside down and adjust the float as outlined in Step 1 of float level adjustment.

Adjustments

1. Float Level (See Fig.1) (Step 1)

With fuel bowl in an inverted position, turn the adjusting screw slot until the top of the float is parallel with the top of the fuel bowl. Tighten locknut snugly.

(See Fig.1) (Step 2)

Bring engine to normal operating temperature, remove plug from side of bowl and adjust running fuel level to be

at lower edge of inspection hole. Tighten locknut and replace sight plug.

Pump Adjustment a. With pump cam (See Fig. 4) in NO. 1 position (See Fig.2) Throttle held in wide open position and the pump operating arm held in a fully compressed position, check the clearance between the adjusting nut and the pump operating arm. The clearance should be 0.015. To adjust, turn the screw.

3. Bowl Vent Adjustment (See Fig 3)

With the throttle valve fully closed distance between top of fuel bowl and vent button should be 1/16". To adjust, bend vent arm at accelerating pump lever.

4. Automatic Choke Setting

Align mark on stat coil with index on choke housing, allowable variation, 2 marks either way from index.

5. Slow Idle Adjustment (See Fig. 4)

Engine at operating temperature and choke wide open, adjust idle mixture needles (15) to a smooth idle. Adjust idle stop screw to 500-550 R.P.M.

6. Fast Idle Adjustment (See Fig. 5)

Place fast idle screw on high step of fast idle cam and set to 1600-1700 R.P.M.

7. Dashpot Adjustment (See Fig. 3)

This adjustment is made with carburetor set at proper idle speed. Depress dashpot plunger fully. The distance between the plunger and throttle lever should be 5/64". To adjust loosen locknut and rotate dashpot assembly. Retighten locknut.

